




Ref No	Part No	Description
1	11111-37B03	Head, Cylinder
2	11141-43E00	Gasket, Cylinder Head
3	08316-10063	Nut
4	09482-00141	Spark Plug (ngk,bpr6hs)
4	09482-00243-111	Spark Plug (denso,w20fpr)
5	11211-18F00-0F0	Cylinder
6	11241-03A10	Gasket, Cylinder
7	01421-06858	Stud Bolt
8	11400-43871	Gasket Set

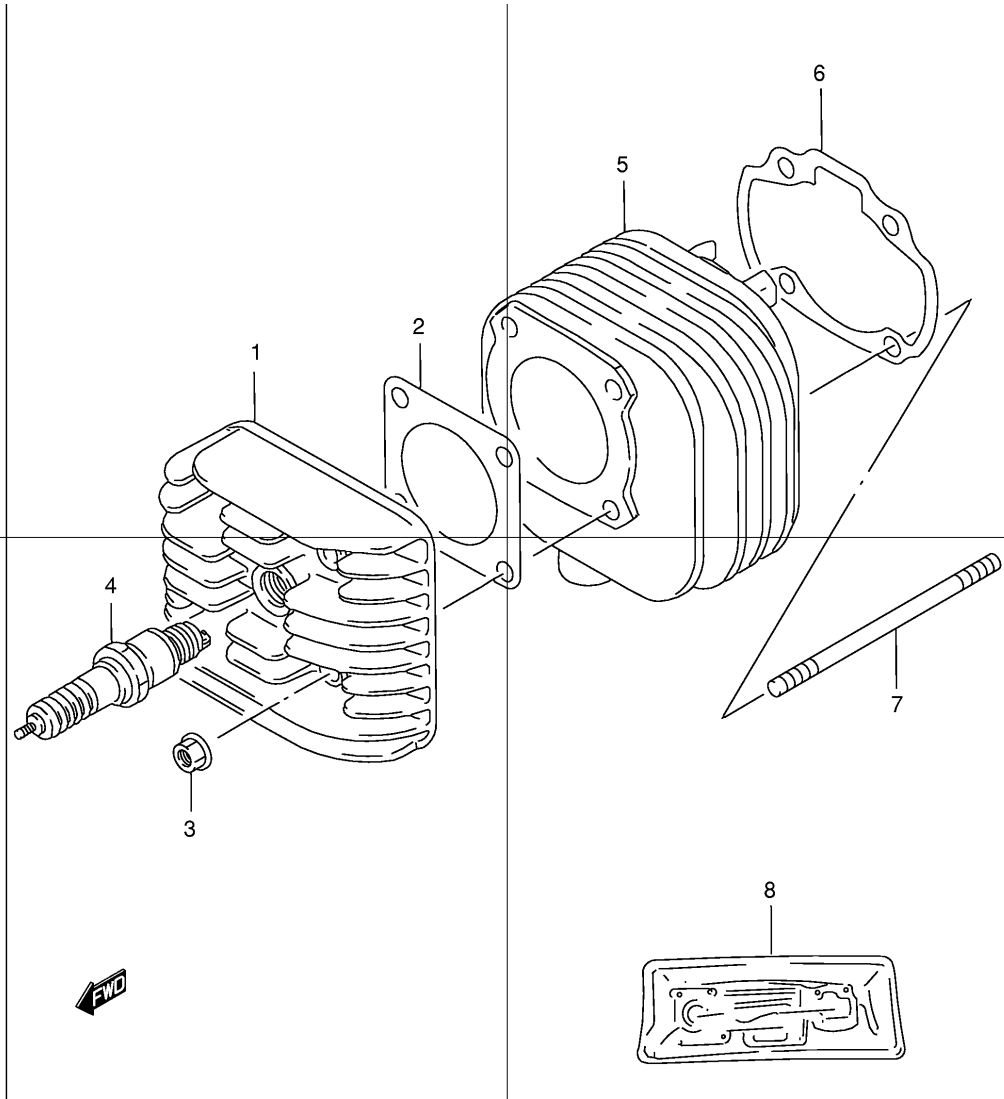


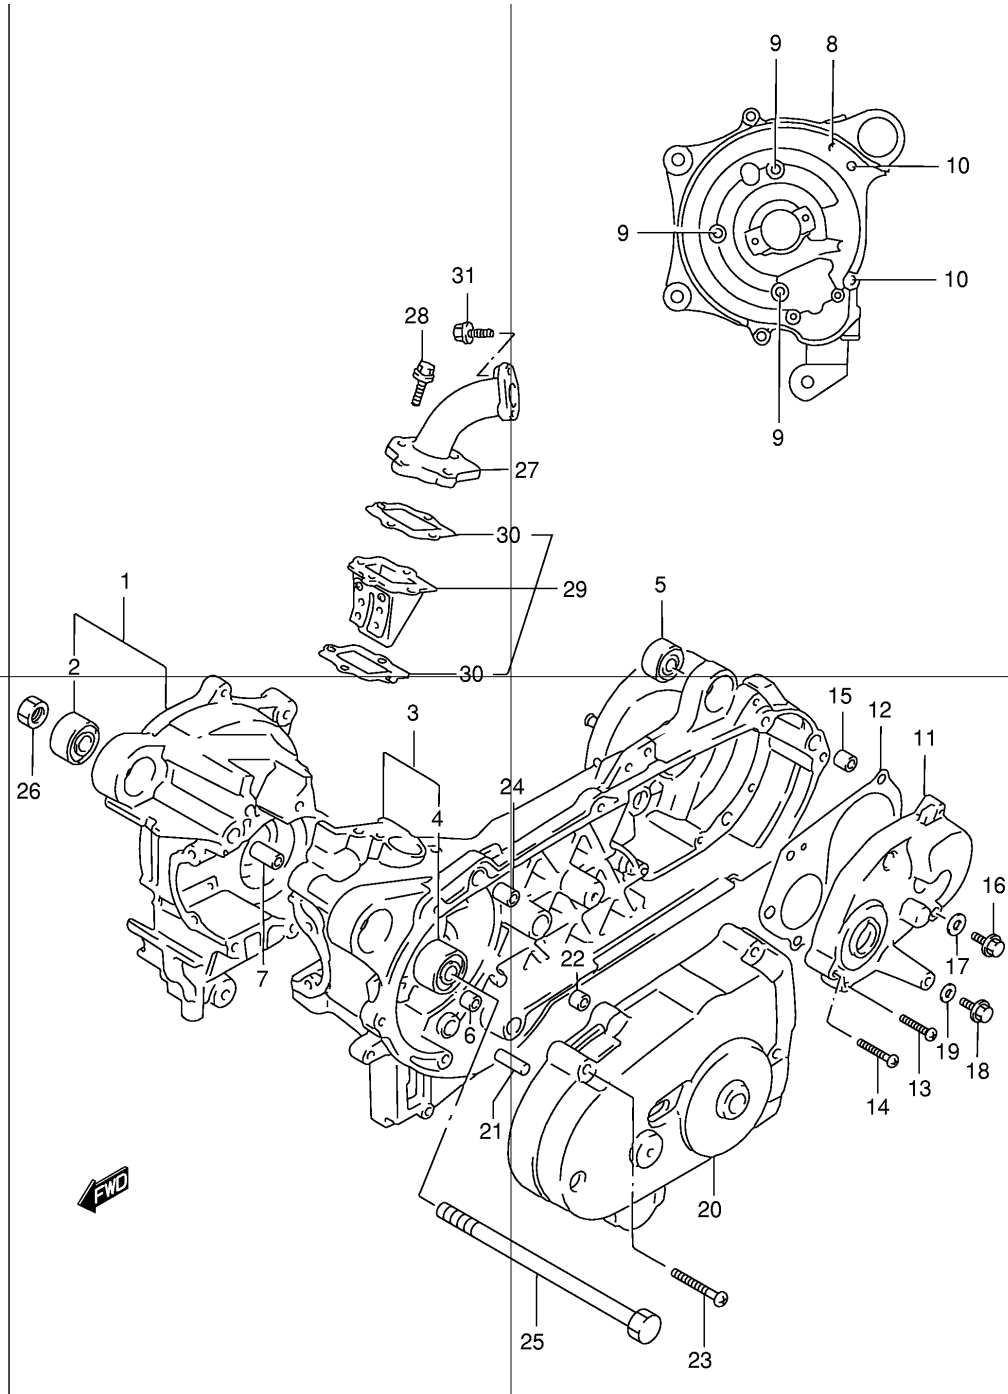

Ref No	Part No	Description
1	11310-43820	Crankcase Set, Rh
2	09319-10050	• . Bush
3	11320-43840	Crankcase Set, Lh
4	09319-10050	• . Bush
5	09319-10032	• . Bush
6	09300-08016	• . Bush
7	09206-11018	Pin
8	02112-06753	Screw
9	02112-06453	Screw
10	02112-06853	Screw
11	11431-43E11	Cover, Gear Box
12	11484-41D30	Gasket, Gear Box Cover
13	02112-06253	Screw
14	02112-06303	Screw
15	04211-11169	Pin
16	01550-08123	Bolt
17	09168-08008	Gasket (8.2x14x1)
18	01550-06123	Bolt
19	09168-06004	Gasket (6.2x11x1.2)
20	11380-43E10	Cover, Kick Gear
21	11389-43E10	• . Shaft, Kick Driven Gear
22	09300-08016	• . Bush
23	02112-06353	Screw
24	04211-11169	Pin
25	09100-10267	Bolt (10x185)
26	08310-00103	Nut
27	13111-43E02	Pipe, Intake
28	01550-06203	Bolt
29	13150-43E00	Valve Assy, Reed
30	13156-43E01	• . Gasket, Reed Valve
31	01550-06163	Bolt

Ref No	Part No	Description	
1	11340-43E10	Cover, Clutch	
2	11482-43E00	Gasket, Clutch Cover	
3	09116-06177	Bolt	
4	09116-06178	Bolt (6x35)	
5	09116-06179	Bolt	
6	11485-43E00	Gasket, Clutch Cover Hole	
7	11486-43E00	Cushion, Clutch Cover Inner	No.1
8	11487-43E00	Cushion, Clutch Cover Inner	No.2

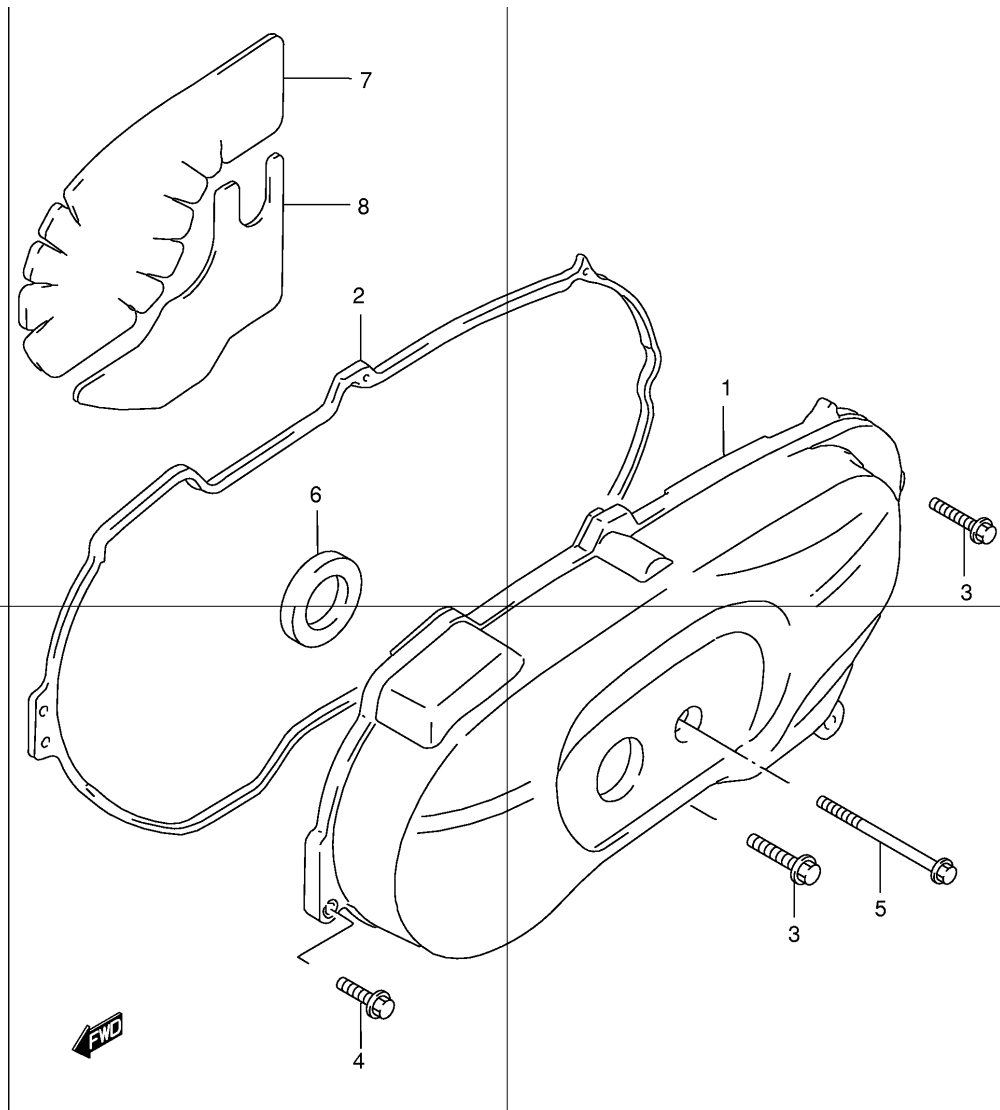


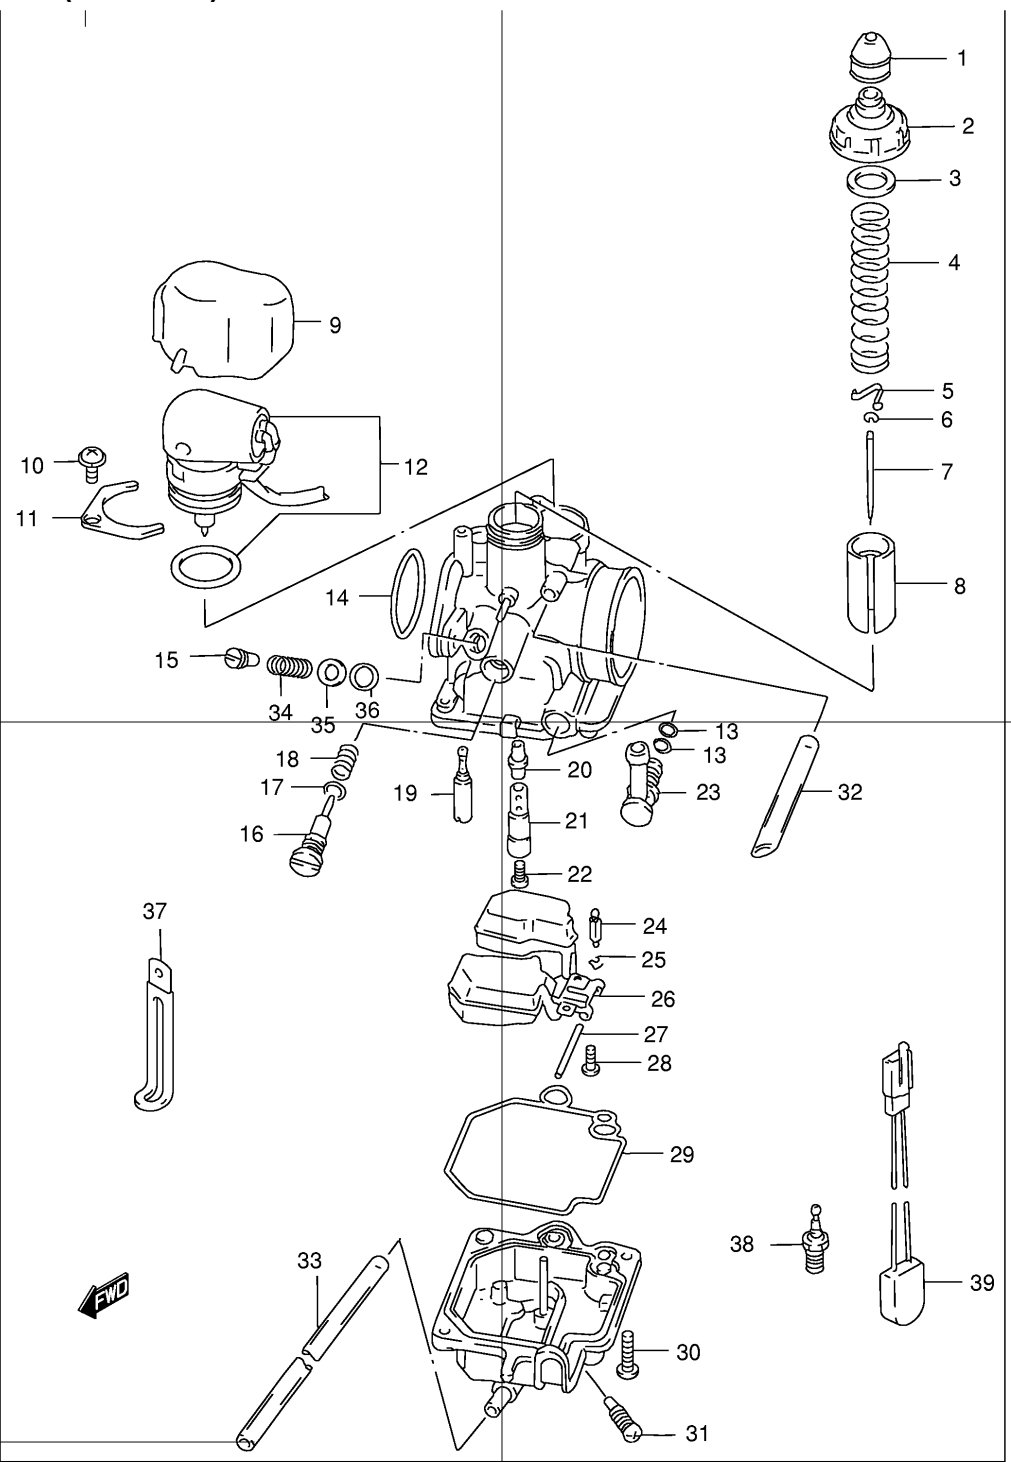


Ref No	Part No	Description
	13200-43E20	Carburetor Assy
1	13681-28E00	. Cap, Carburetor
2	13261-43E00	. Top, Carburetor
3	13266-43E00	. Gasket
4	13573-43E00	. Spring
5	13392-43E00	. Plate, Clip
6	13394-43E00	. Clip, Needle
7	13383-43E20	. Needle, Jet (n4wd)
8	13551-43E00	. Valve, Throttle
9	13433-06F30	. Cover
10	02112-34083	. Screw
11	13428-06F30	. Plate
12	13430-06F30	. Element Assy, Thermo
13	13294-43E00	. O Ring
14	13436-43E00	. O Ring
15	13279-43E00	. Screw, Adjust (1,1/2)
16	13267-43E00	. Screw, Stop
17	13278-43E00	. O Ring
18	13297-43E00	. Spring
19	09492-38003	. Jet, Lower (38)
20	13341-43E00	. Jet, Needle
21	13342-06F40	. Holder, Jet
22	09491-72013	. Jet, Main (72)
23	13685-43E00	. Joint
24	13370-43E00	. Valve, Needle
25	13375-43E00	. Clip, Needle Valve
26	13250-43E00	. Float Assy
27	13254-43E00	. Pin, Float
28	13602-43E00	. Screw
29	13258-43E00	. Gasket
30	13602-26E10	. Screw
31	13247-43E00	. Plug, Drain
32	13683-43E00	. Hose (5x8x90)
33	13684-43E00	. Hose (4x7x250)
34	13271-43E00	. Spring, Air Screw
35	13291-26E00	. Washer
36	13295-26E00	. O Ring
37	09404-06432	Clamp (I:60)
37	09404-06432	Clamp (I:60)
38	13650-25E01	Heater Assy, Carburetor
39	13655-25E00	Thermo Switch, Carburetor


Heater

Ref No	Part No	Description
1	13700-43E00	Cleaner Assy, Air
2	13781-43E00	• Filter
3	13891-43E00	• Tube, Inlet
4	13746-43E00	• Gasket, Cleaner
5	13741-43E00	• Cap, Cleaneer
6	03142-05163	• Screw
7	13881-43E00	• Tube, Outlet
8	13170-43E00	Clamp, Outlet Tube
9	09116-06171	Bolt

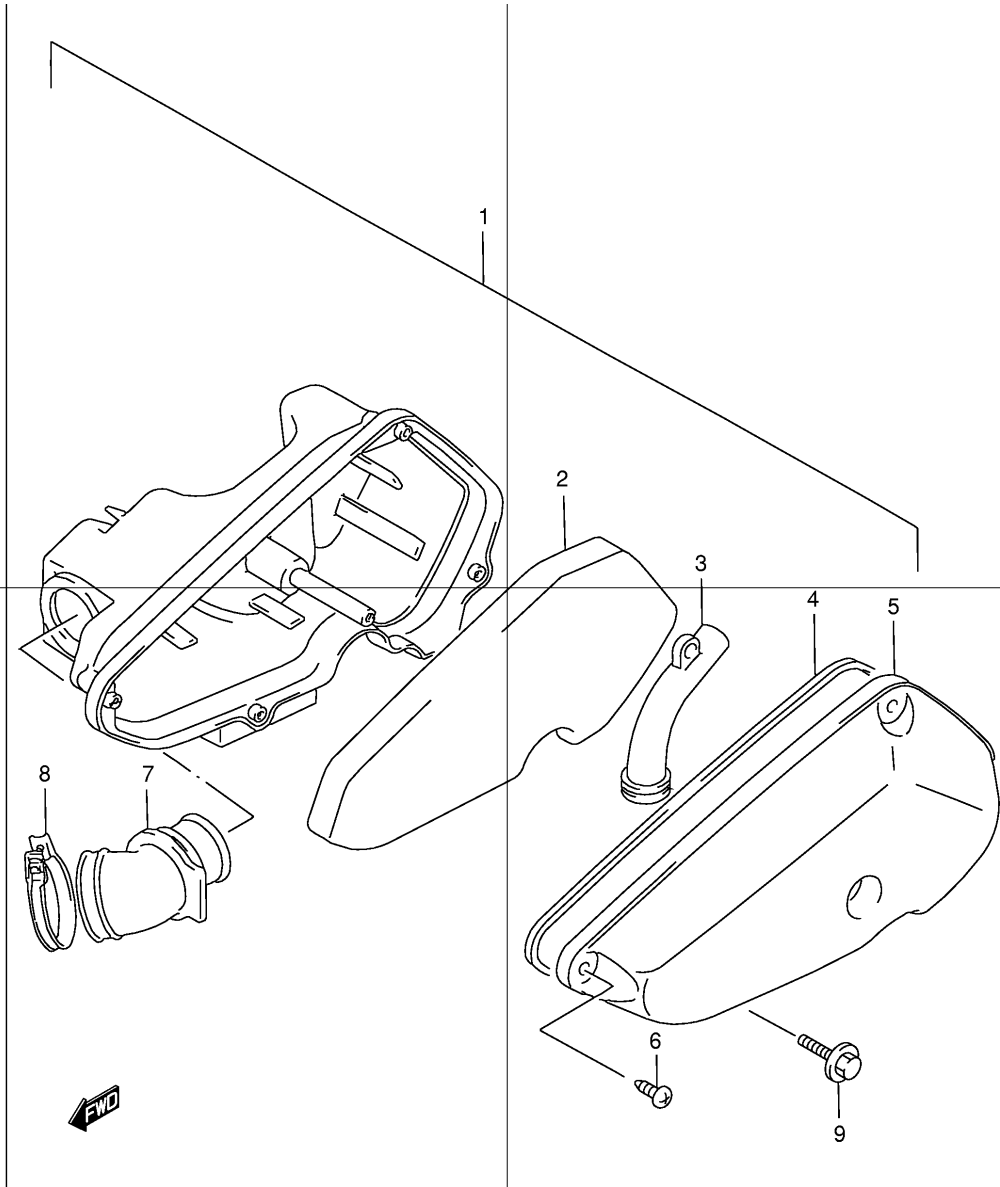

Ref No	Part No	Description
1	14181-16D00	Gasket, Exhaust Pipe
2	07120-06203	Bolt
3	14310-43E10	Body, Muffler
4	14781-43E00	Cover, Muffler
5	09139-06066	Bolt (6x12)
6	09168-06120	Gasket (5.8x13x1.4)
7	09180-06001	Spacer (6.2x8.3x5.7)
8	09320-08051	Cushion
9	01550-08253	Bolt

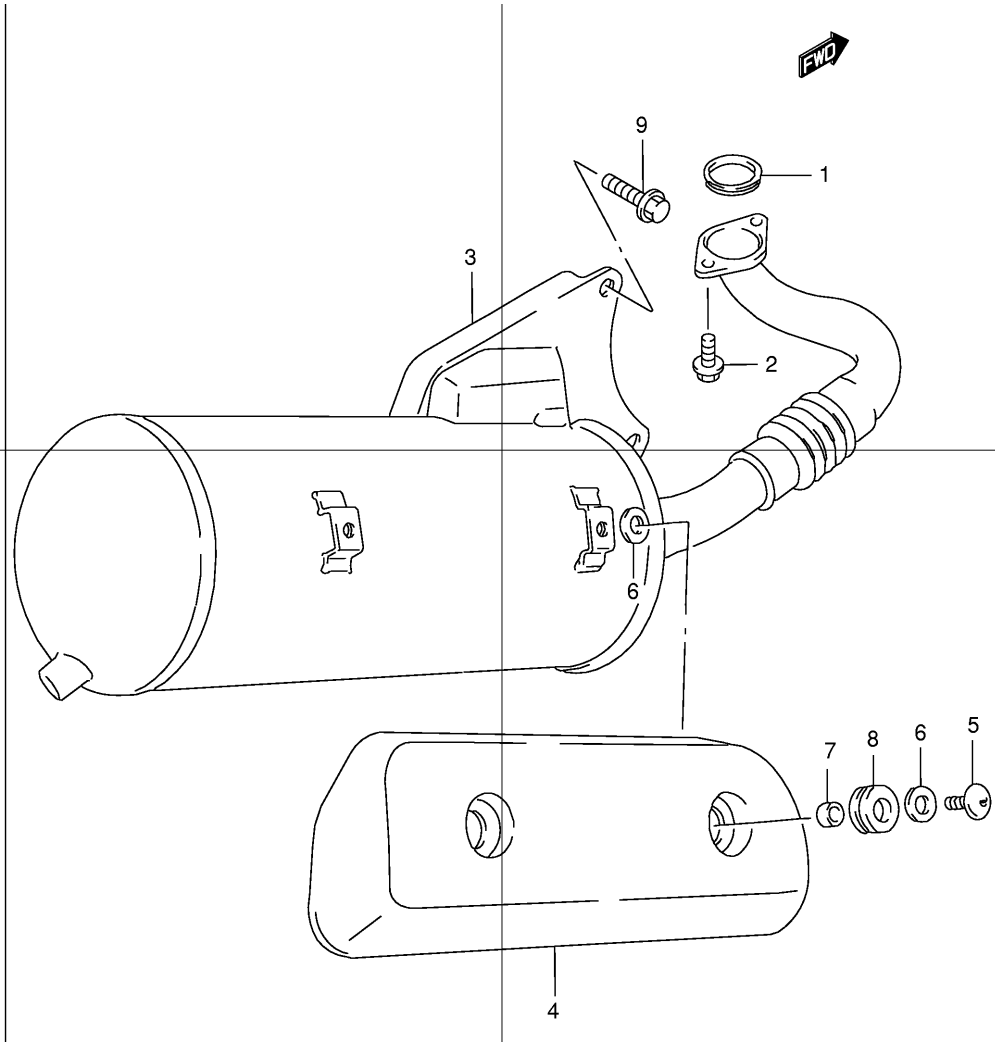


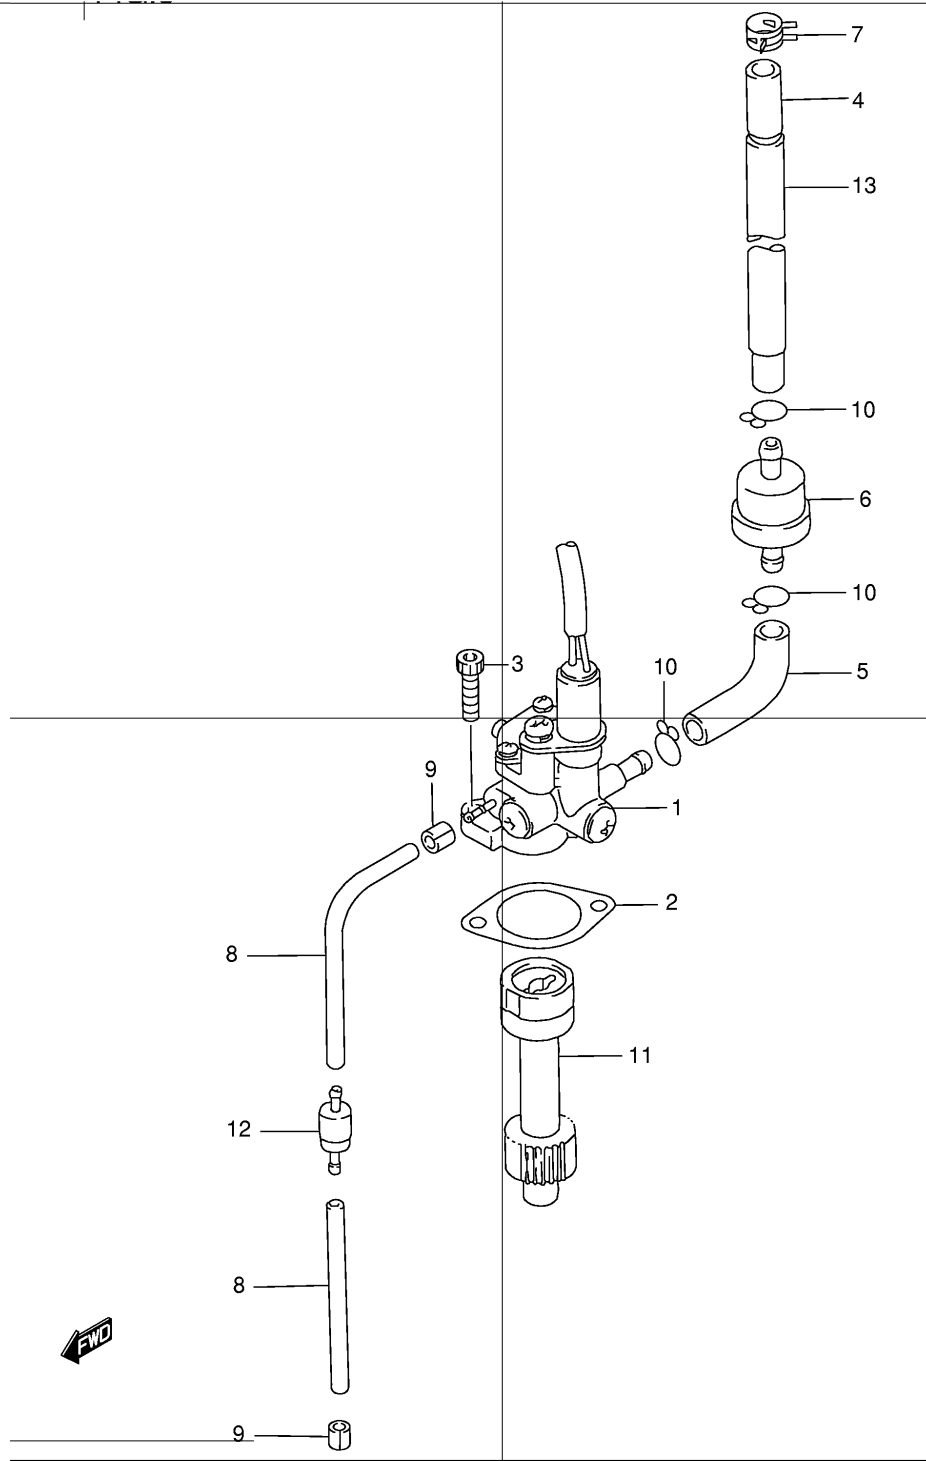


Ref No	Part No	Description
1	16100-43E10	Pump Assy, Oil
2	16731-37B00	Gasket, Oil Pump
3	07130-05163	Bolt
4	09359-45854-600	Hose (4.5x8.5,6x9.5,l:600)
5	16821-43E00	Hose, Oil No.1 (l:50)
6	16850-06F00	Filter, Oil (0,1)
7	09401-09403	Clip
8	09352-20503-600	Hose (2x5x600)
9	09401-04401	Clip
10	09401-08401	Clip
11	16331-43E00	Gear, Oil Pump Driven
12	16910-41D00	Valve, Oil Hose No.2 Check
13	09351-10127-600	Hose (10x12x600)

Ref No	Part No	Description
--------	---------	-------------


1	17110-43E00	Fan, Cooling
2	02112-16123	Screw
3	17130-43E00	Cowling, Fan
4	17120-43E00	Cowling, Cylinder
5	09180-06285	• . Spacer
6	02112-06203	Screw
7	02142-06303	Screw
8	03111-16203	Screw

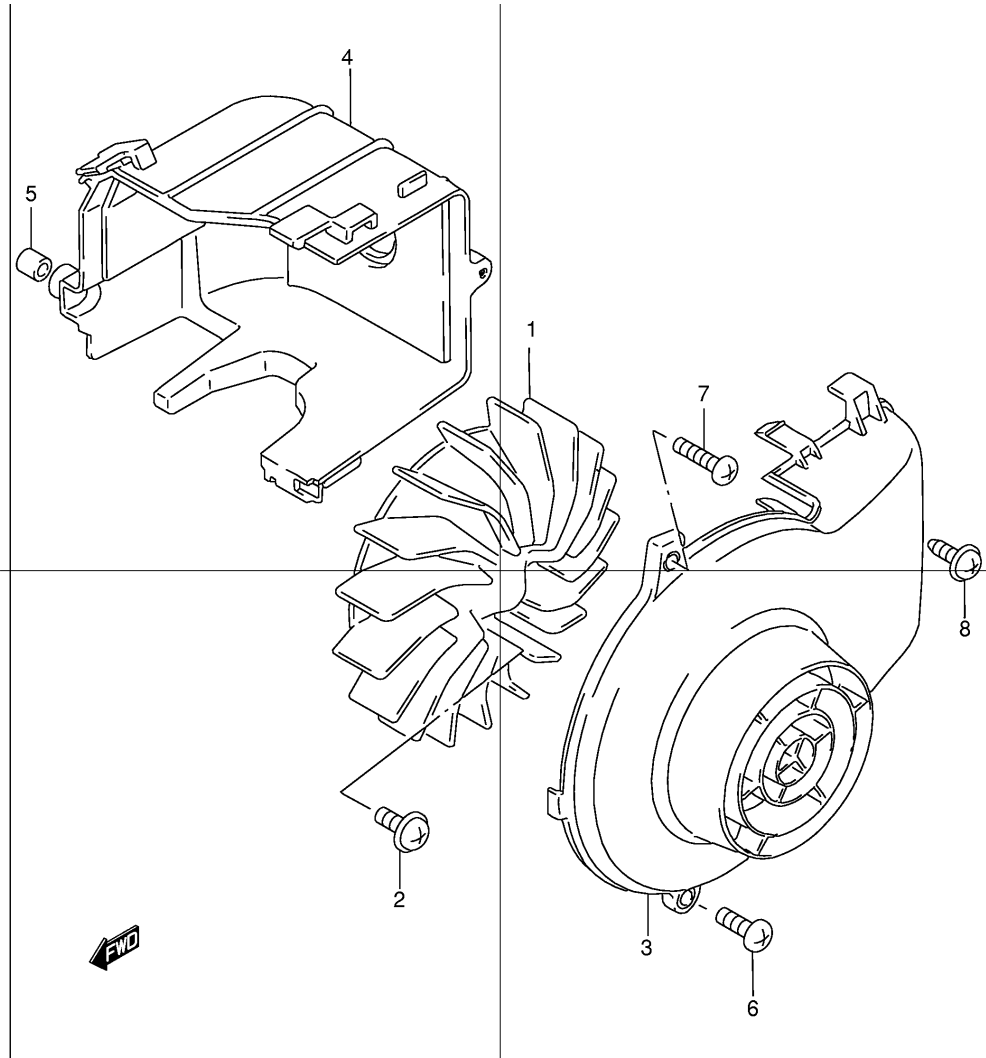

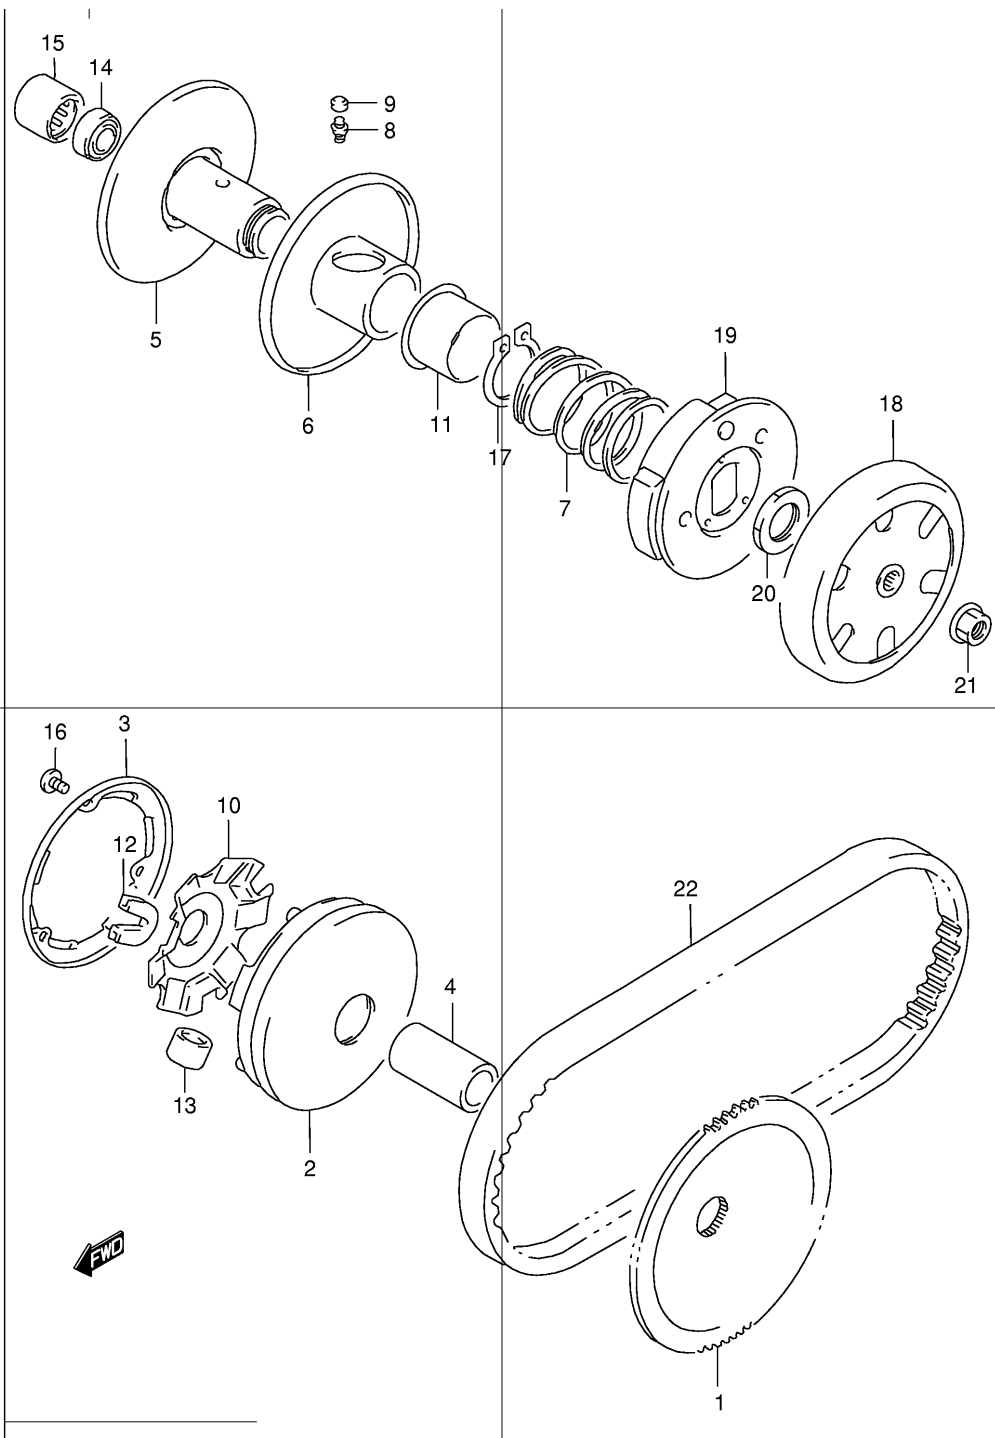


Ref No	Part No	Description
1	21111-43E00	Face, Fixed Drive
2	21120-43E02	Face, Movable Drive
3	21122-43E00	Cover, Movable Drive
4	21125-43E01	Spacer, Movable Drive
5	21210-43E00	Face, Fixed Driven
6	21240-43E01	Face, Movable Driven
7	21243-20E20	Spring
8	09201-05006	Pin
9	09180-05042	Spacer (5x8.2x3.5)
10	21431-43E00	Plate, Movable Drive
11	21471-03A03	Seat, Movable Driven Face
12	21481-29C40	Damper, Movable Drive
13	21650-41D60	Roller, Movable Drive
14	09262-12018	Bearing (12x24x6)
15	09263-17042	Bearing (17x25x16.7)
16	02142-04103	Screw
17	08331-41246	Circlip
18	21220-43E00	Housing, Clutch
19	21501-43E30	Clutch Assy, Shoe
20	09140-28004	Nut
21	08316-10103	Nut
22	27601-43E00	V Belt, Drive


Ref No	Part No	Description
1	24131-36C20	Shaft, Drive
2	24150-43E40	Shaft, Idle
3	09283-17023	Oil Seal (17x28x5.5)
4	08110-62030	Bearing
5	08113-62017	Bearing
6	09181-12167	Washer (12x20x1.0)
7	08211-16251	Thrust Washer
8	24140-43E01	Shaft, Rear Axle (nt:48)
9	09283-27010	Oil Seal (27x40x6)
10	08130-62047	Bearing
11	24751-07900	Retainer, Rear Axle Shaft
12	02122-06163	Screw

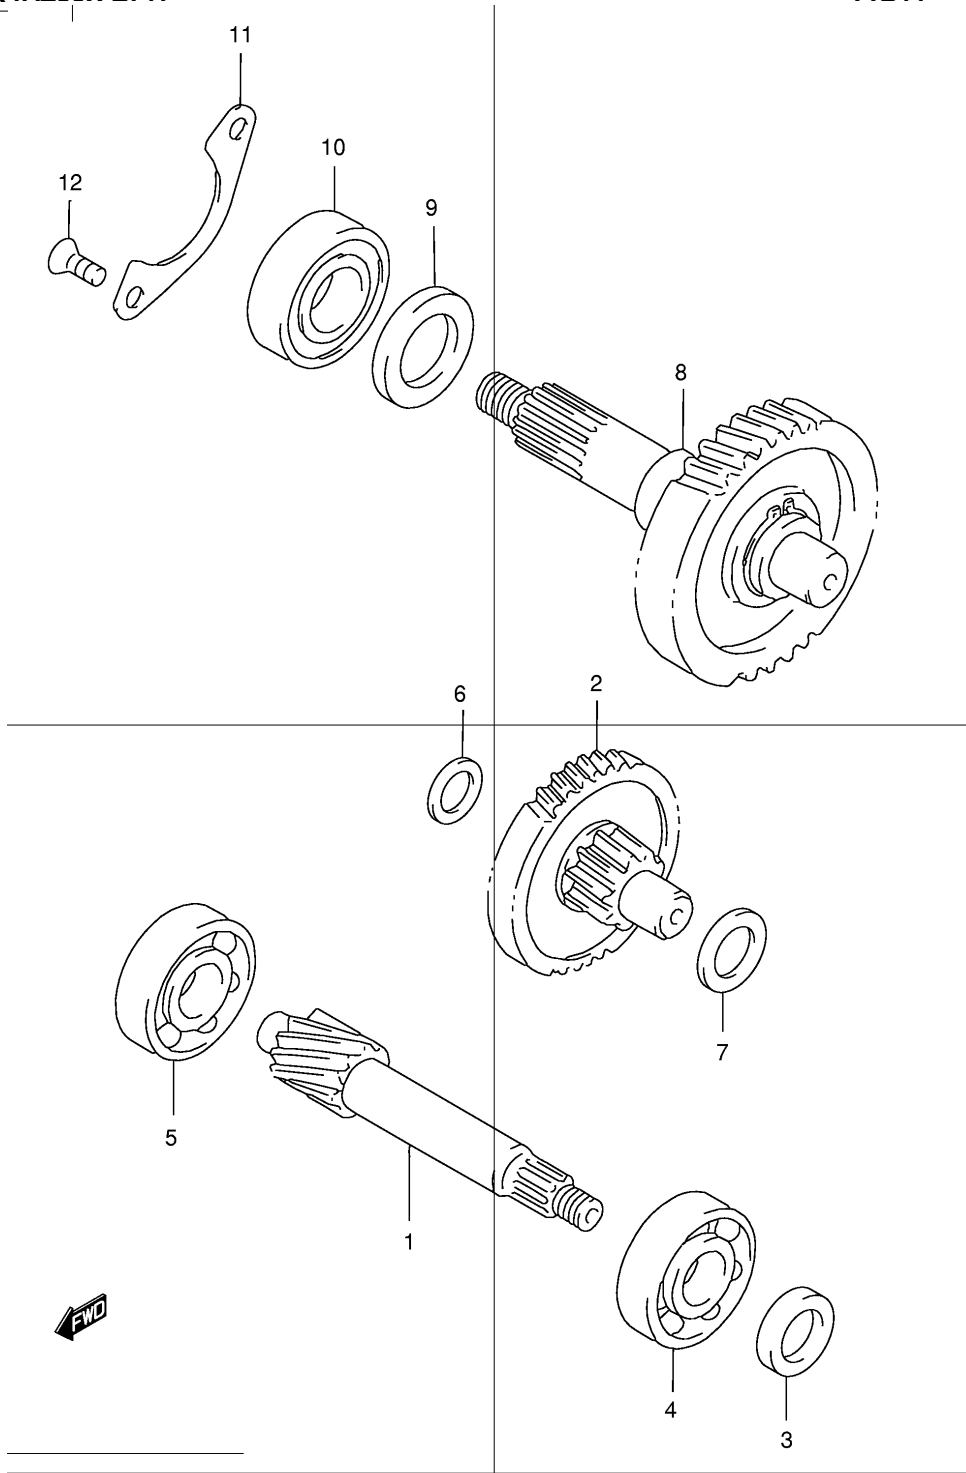

Bearing

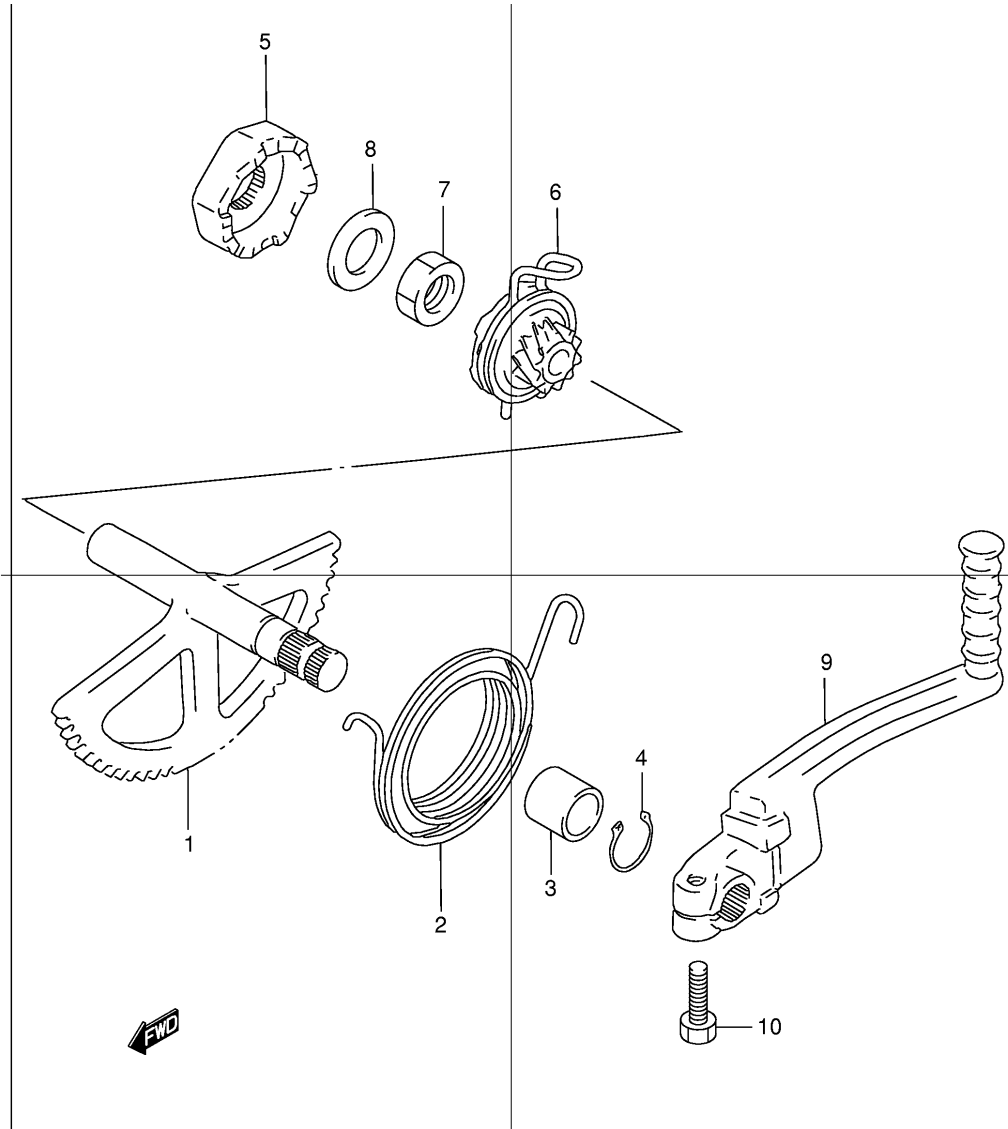



Ref No	Part No	Description
1	26210-43E01	Shaft Kick
2	26212-43E00	Spring, Kick Starter Shaft
3	09300-14011	Bush (14x18x15)
4	08331-31146	Circlip
5	26231-43E00	Starter, Kick Rh
6	26200-43E20	Gear Assy, Kick Starter Driven
7	09140-12039	Nut
8	09164-12020	Washer
9	26300-43E11	Lever Assy, Kick Starter
10	01500-06203	Bolt

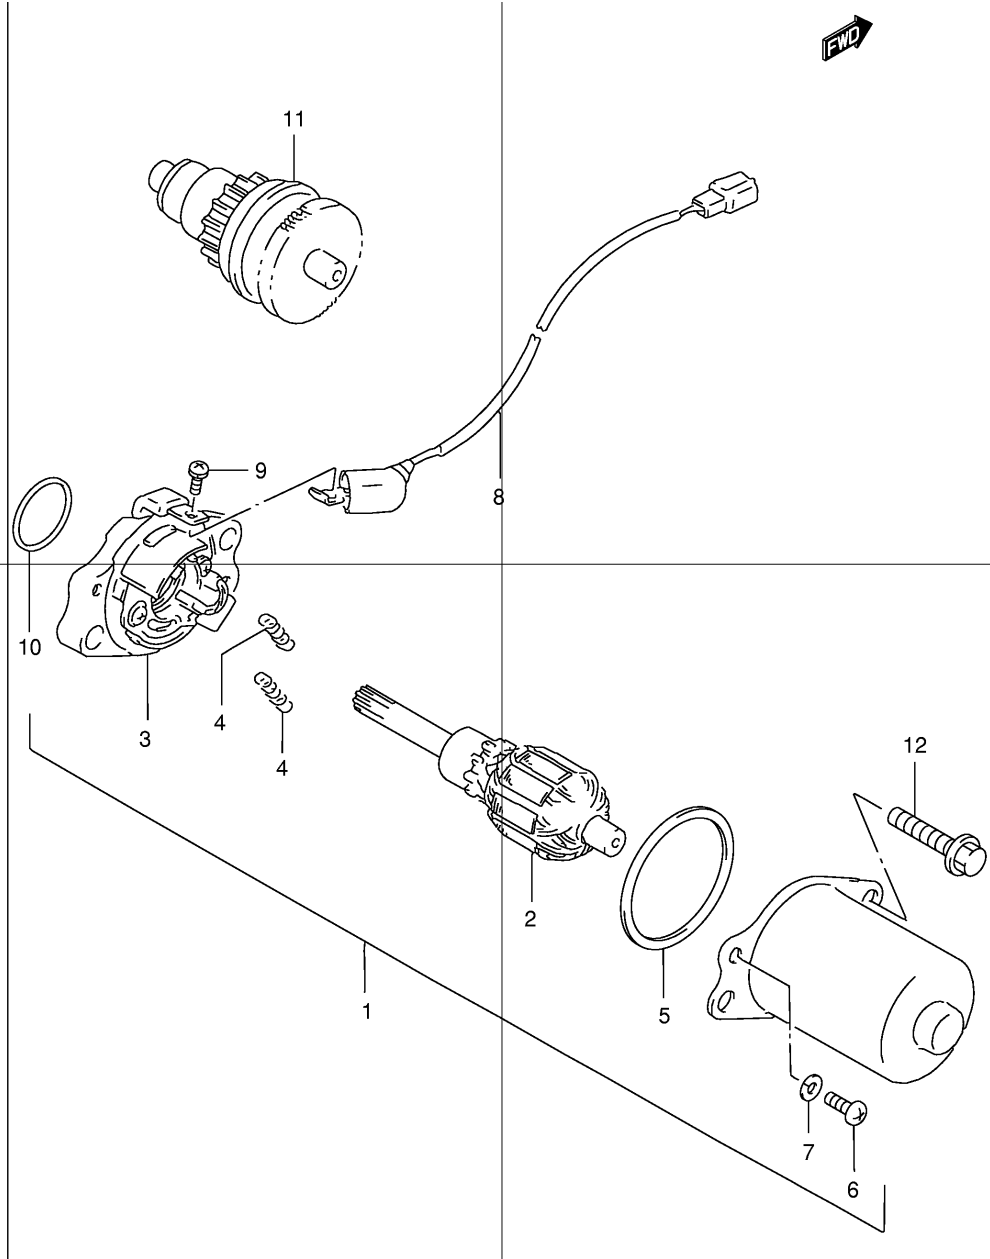


Ref No	Part No	Description
1	31100-36C02	Motor Assy, Starting
2	31311-37B01	. Armature Assy
3	31130-37B01	. Holder Assy, Brush
4	31135-47A00	. Spring, Brush
5	31157-03A00	. Gasket
6	02112-34103	. Screw
7	08321-01043	. Lock Washer
8	31142-37B01	. Wire, Lead
9	02112-34063	. Screw
10	09280-19005	. O Ring (d:2.4,id:19)
11	31370-37B01	Pinion Assy, Starting Motor
12	01547-06253	Bolt

Ref No	Part No	Description
1	32101-17F00	Stator Assy
2	32102-06F00	Rotor Assy
3	07130-05123	Bolt
4	07130-05203	Bolt
5	08316-10103	Nut
6	08341-31039	Key

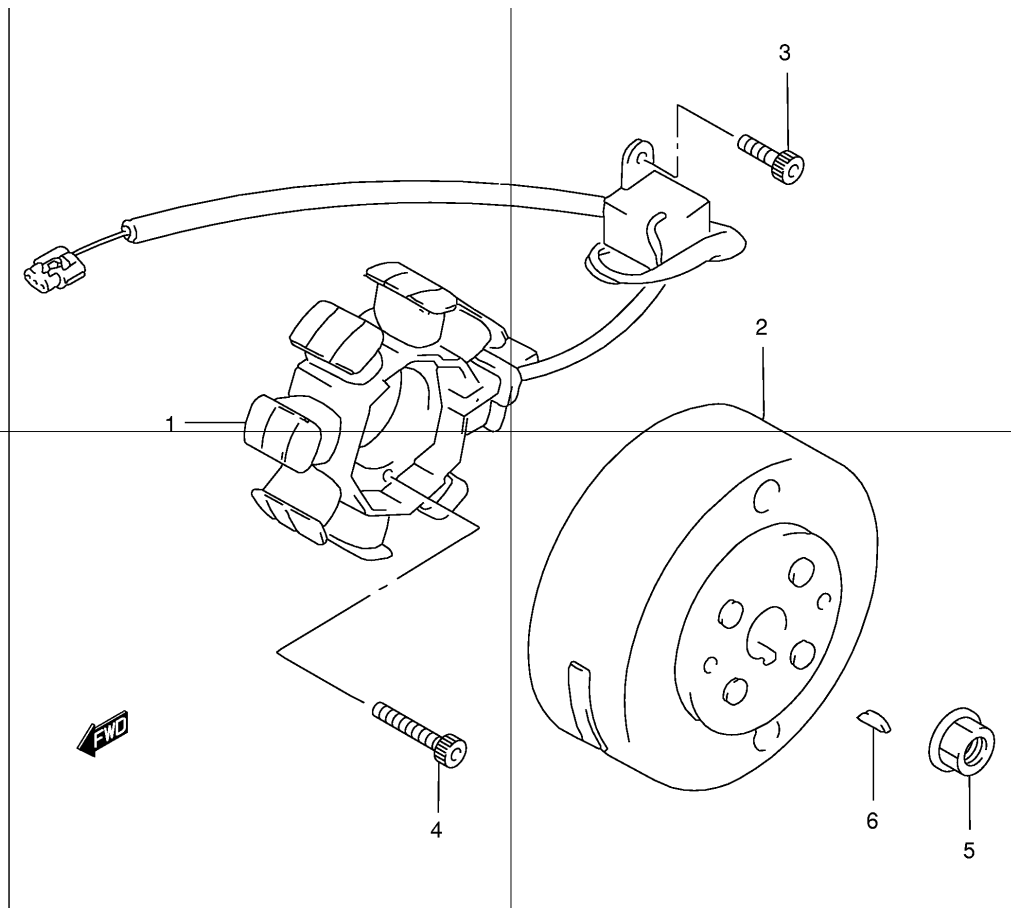


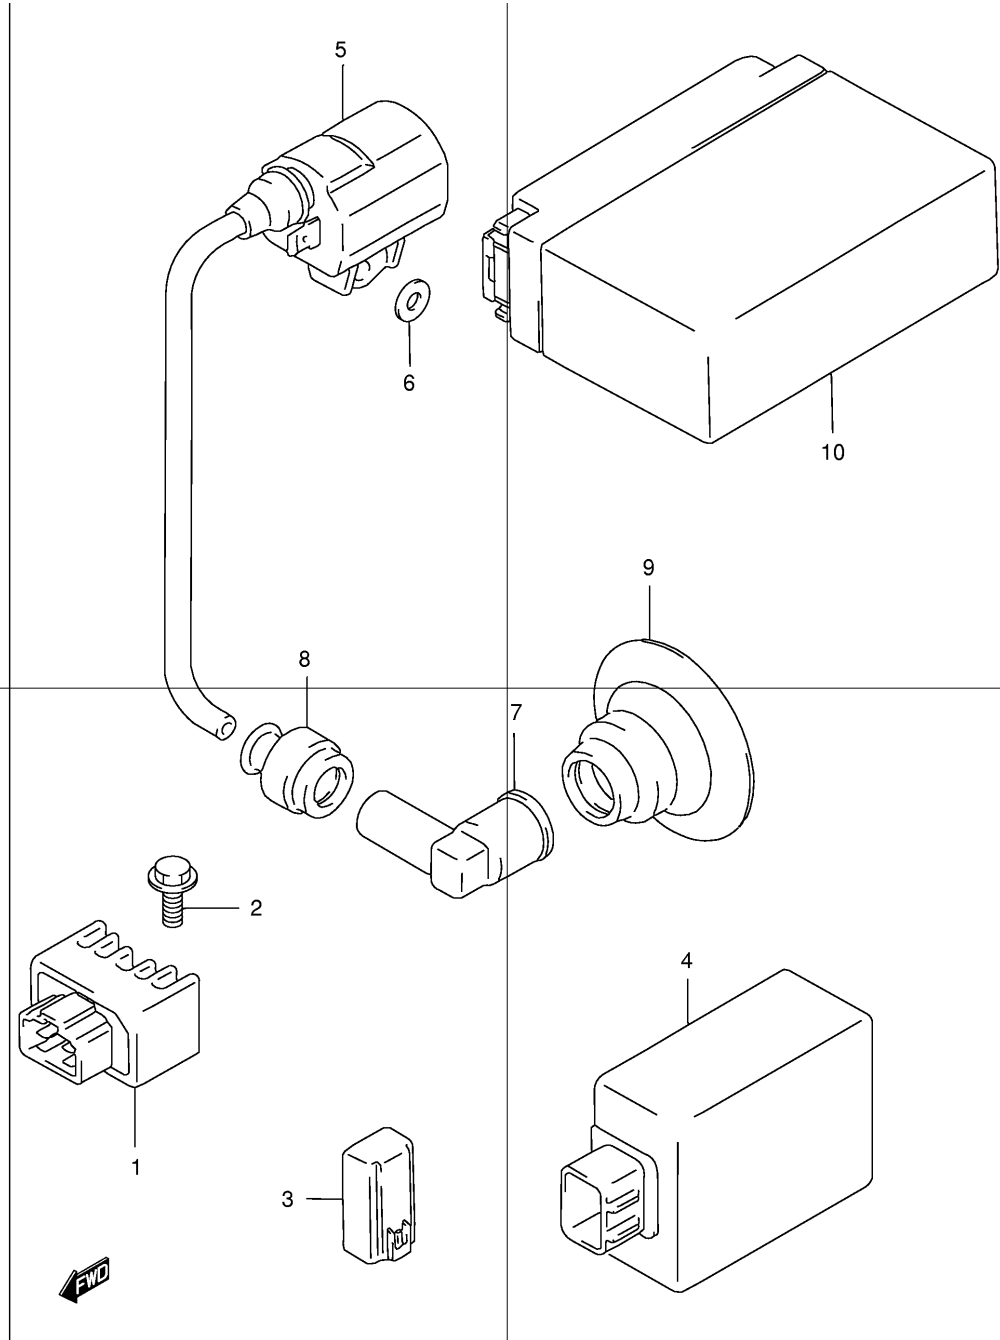


Ref No	Part No	Description
1	32800-43E00	Rectifier Assy
2	01560-06123	Bolt
3	31800-43E01	Relay Assy, Starting Motor
4	32900-43E31	Cdi Unit
5	33410-43E00	Coil Assy, Ignition
6	08322-01063	Washer
7	33510-35411	Cap Assy, Spark Plug
8	33542-38B00	Seal, High Tension Cord
9	33543-02100	Boot, Spark Plug
10	33610-39C20	Battery Assy (yt4b-bs,12v,23ah)

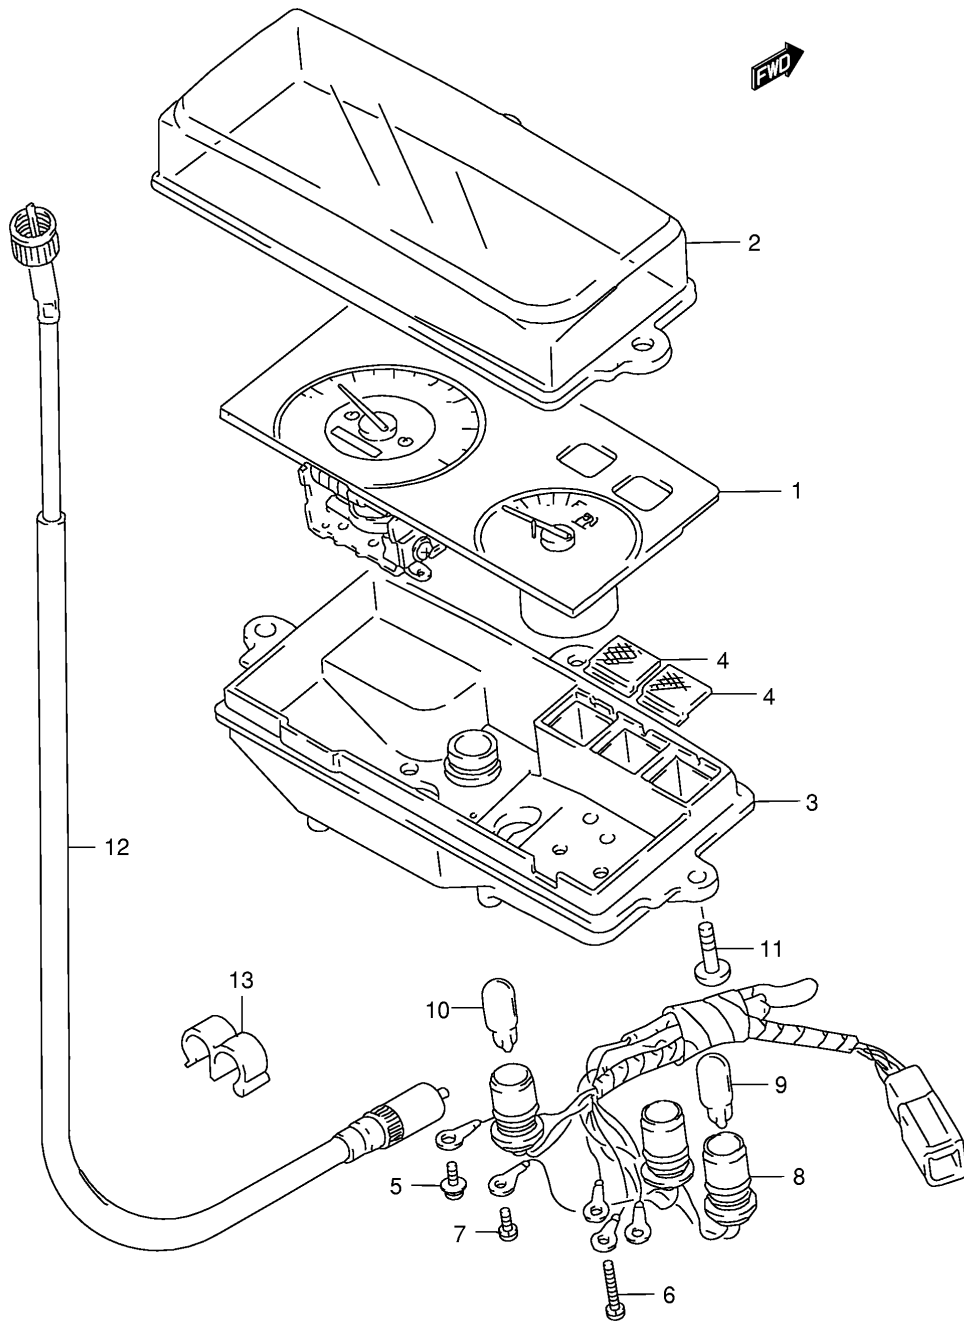

Ref No	Part No	Description
1	34120-43E60	Speedometer
2	34150-39C01	Hood, Meter
3	34111-36C11	Case, Lower
4	36361-36C00	Lens, Pilot
5	02112-74103	Screw
6	34383-09400	Screw (3x22)
7	02112-33103	Screw
8	34173-43E30	Socket
9	09471-12028	Bulb (12v,3.4w)
10	09471-12077	Bulb (12v,1.7w)
11	03541-05203	Screw
12	34910-36C02	Cable Assy, Speedometer
13	09408-00033	Clip

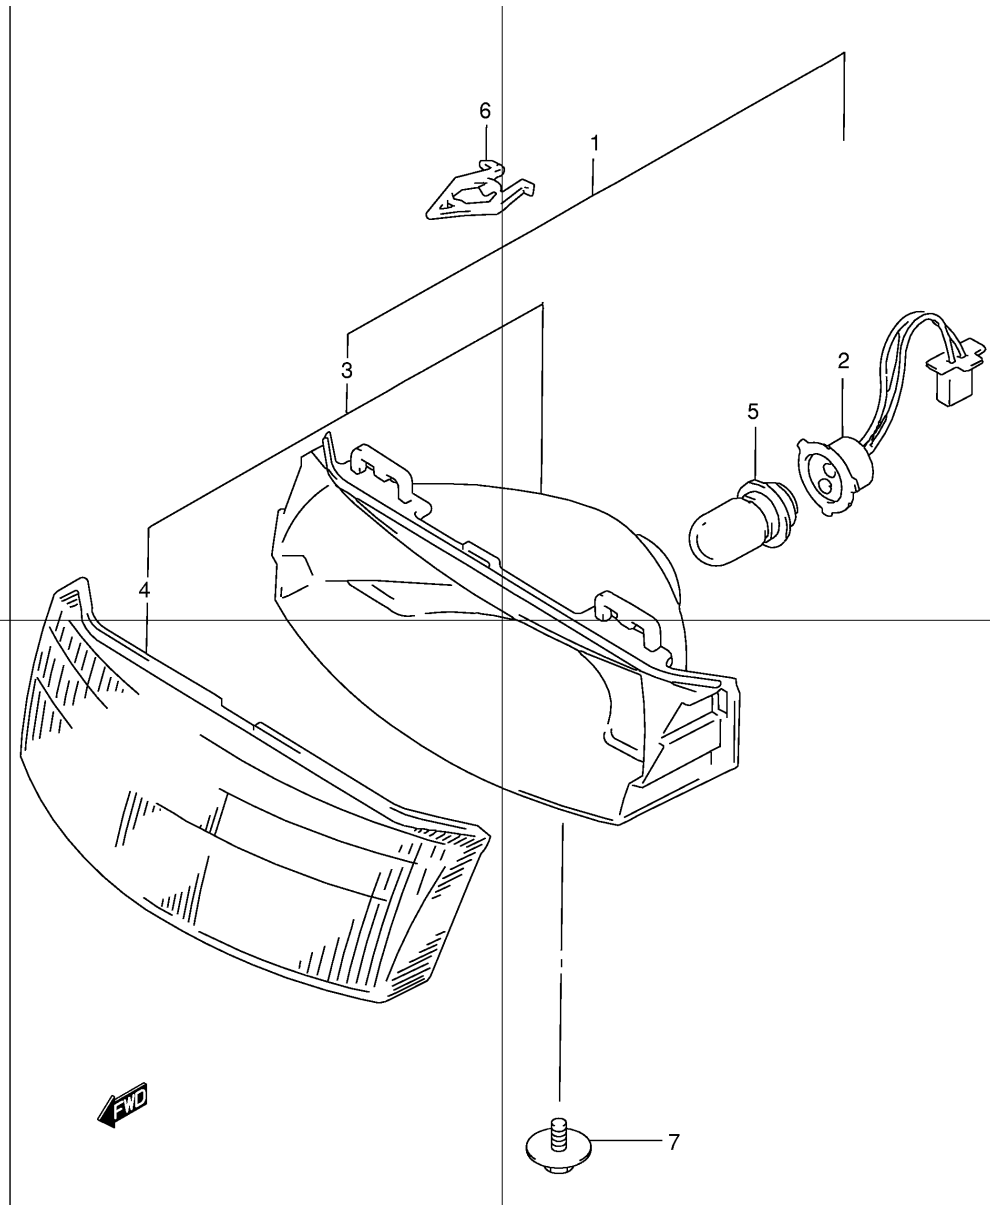



Ref No	Part No	Description
1	35100-39C31-999	Headlamp Assy
2	35171-16A00	• . Socket
3	35121-39C11	• . Unit, Headlamp
4	35124-39C10	•• .. Lens
5	09471-12171	• . Bulb (12v,30/30w)
6	35194-39C00	Stopper, Headlamp Fitting
7	09136-05051	Screw

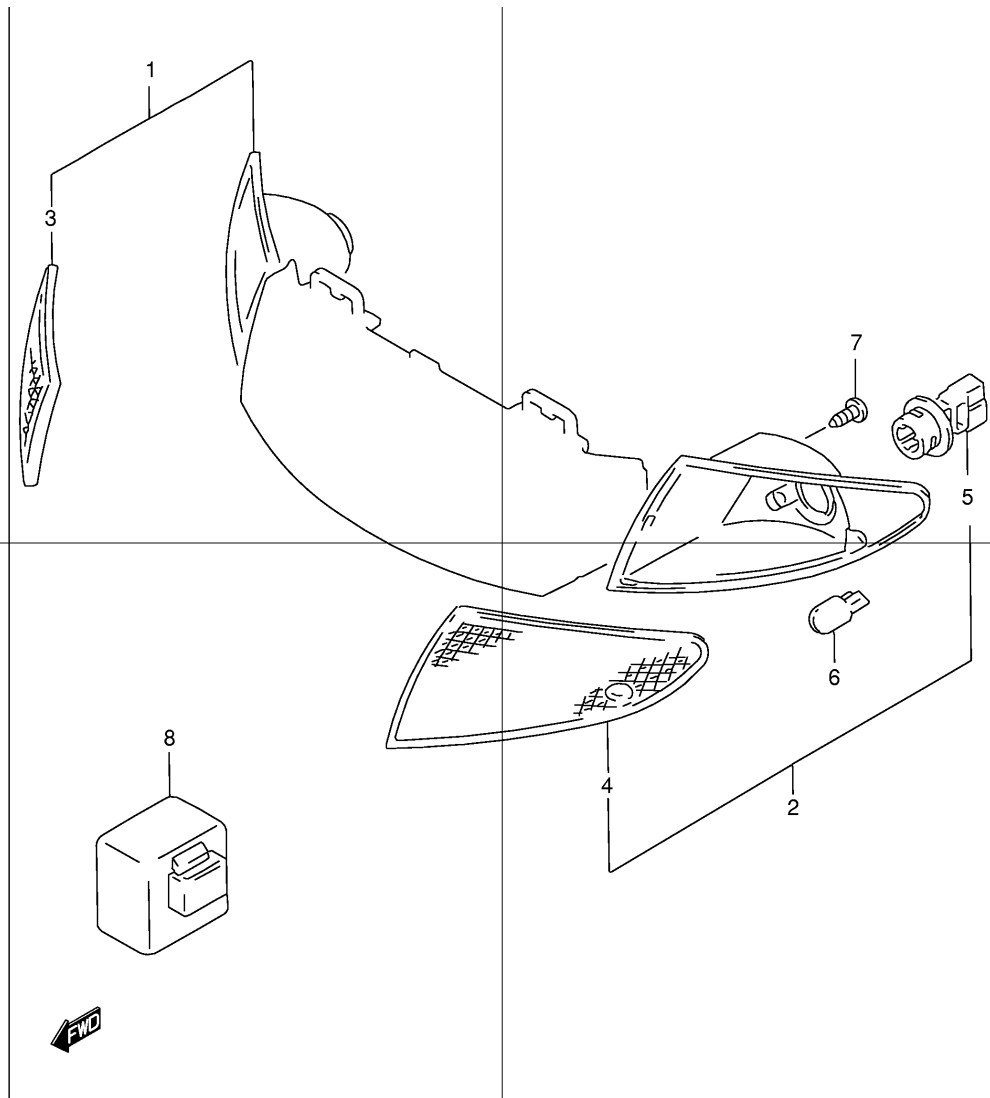


Ref No	Part No	Description
1	35601-43EA0-999	Lamp Assy, Fr Turn Signal Rh
2	35602-43EA0-999	Lamp Assy, Fr Turn Signal Lh
3	35612-39C10	• . Lens, Front Turn Rh
4	35632-39C10	• . Lens, Front Turn Lh
5	35618-70B20	• . Socket
6	09471-12113	Bulb (12v,8w)
7	09132-04030	Tapping Screw
8	38610-43E00	Relay Assy, Turn Signal/buzzer

Ref No	Part No	Description
1	35710-43E00	Lamp Assy, Rear Combination
2	35712-43E00	. Lens, Tail/stop
3	09471-12119	. Bulb (12v,18/5w)
4	35652-43E00	. Lens, Turn Signal Rh
5	35672-43E00	. Lens, Turn Signal Lh
6	09471-12113	. Bulb (12v,8w)
7	35912-36C00	. Lens, License
8	03211-04146	. Screw
9	09148-04024	Nut

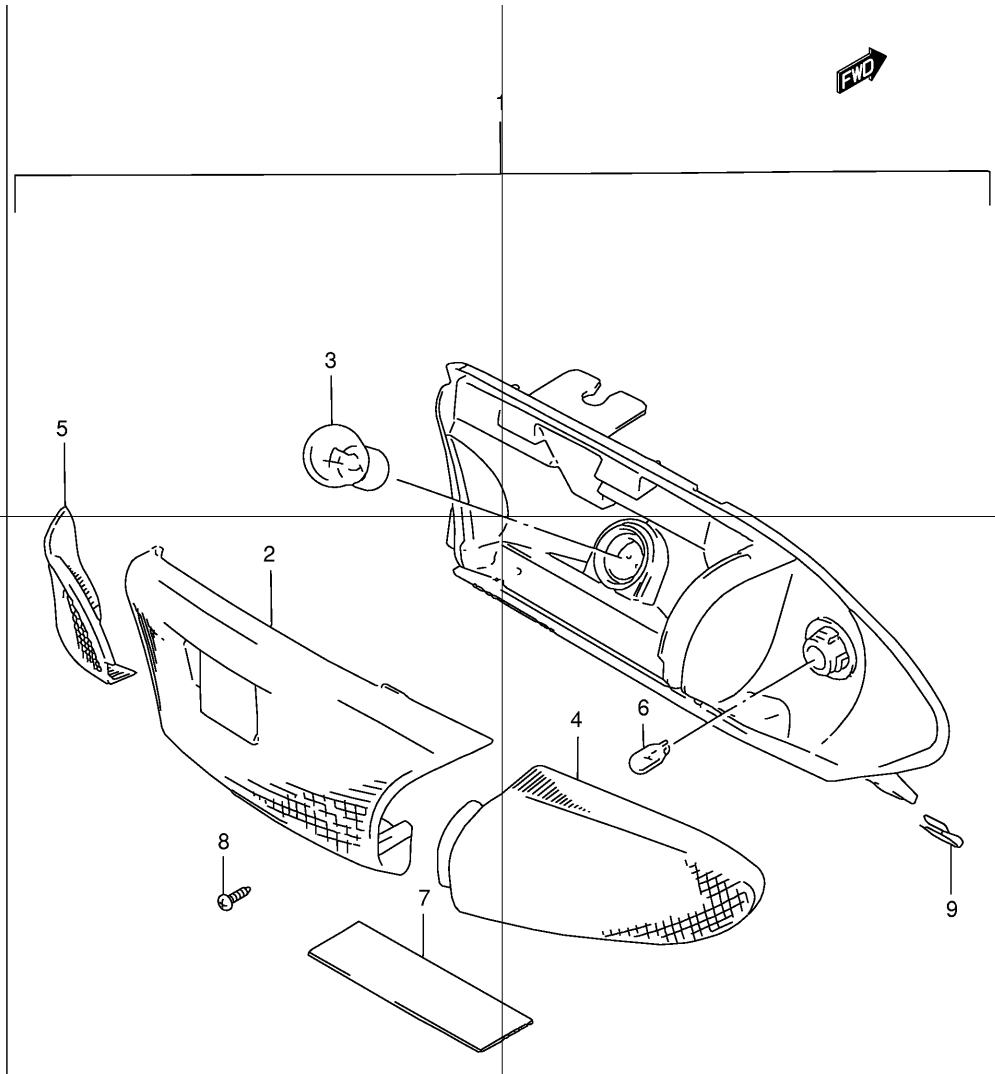


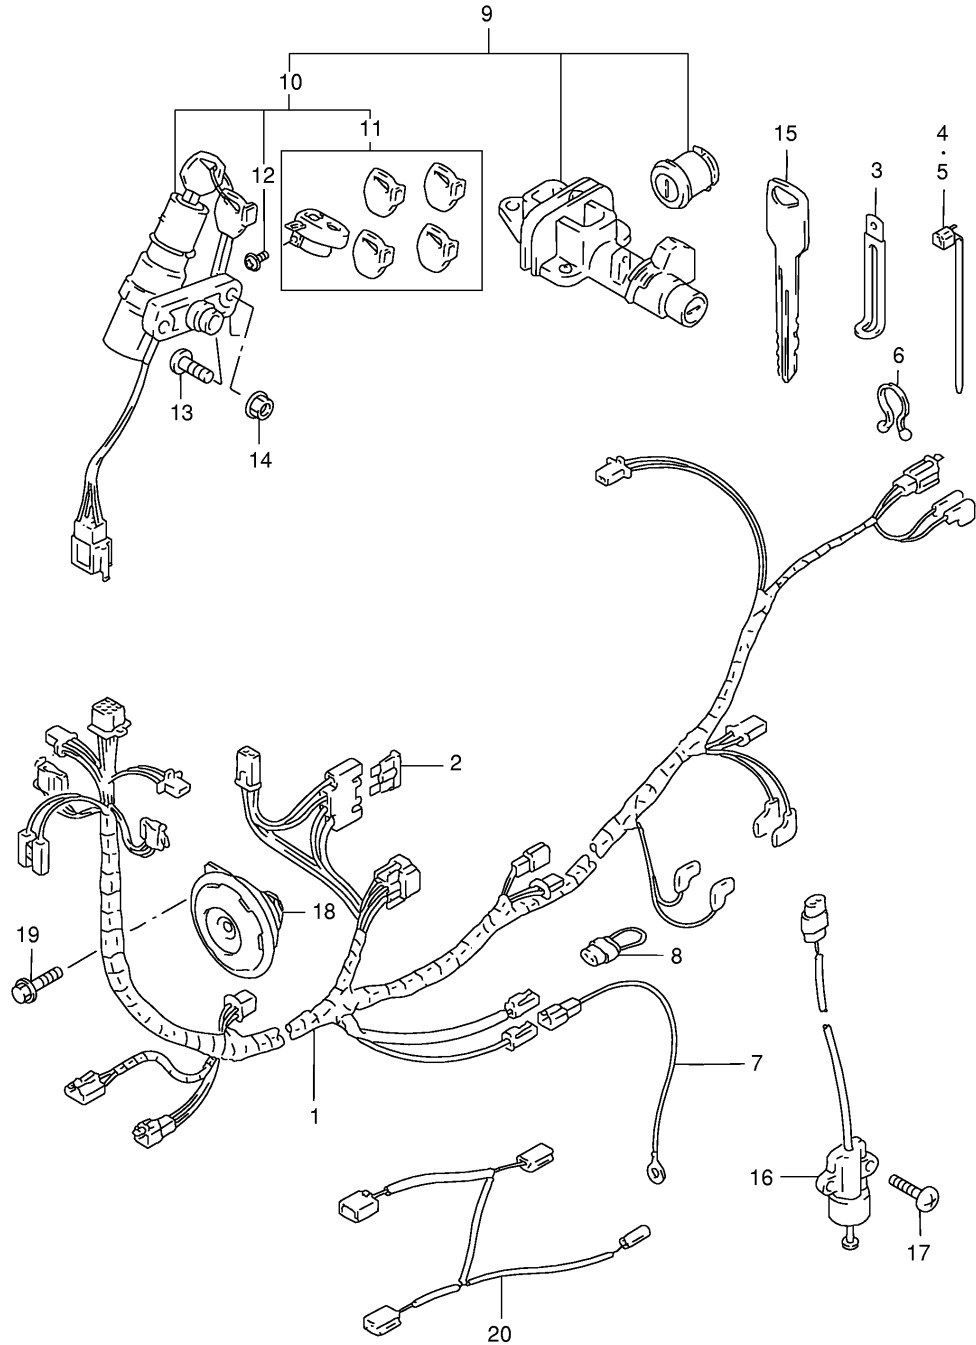

Ref No	Part No	Description
1	36610-43EF0	Harness, Wiring
2	09481-10101	• . Fuse (10a)
3	09404-06432	Clamp (l:80)
4	09407-14403	Clamp (l:125)
4	09407-18402	Clamp (l:165)
5	09407-19401	Clamp(l:190)
6	09408-00012	Clip, Side Stand
7	33860-43E00	Wire, Engine Earth
8	36851-21E90	Wire, Side Stand Short
9	37000-43851	Lock Set
10	37100-43EB0	• . Lock Assy, Steering
11	37155-14F01	•• .. Shutter, Steering Lock
12	37159-43E00	•• .. Tork Bolt (5x8)
13	09139-06048	Screw (6x20)
14	08316-10063	Nut
15	37146-14F00	Key, Blank
16	37840-43E00	Switch Assy, Side Stand
17	02112-05163	Screw
18	38500-43EA0	Horn Assy
19	01550-06123	Bolt
20	36854-43E00	Wire, Carb Heater

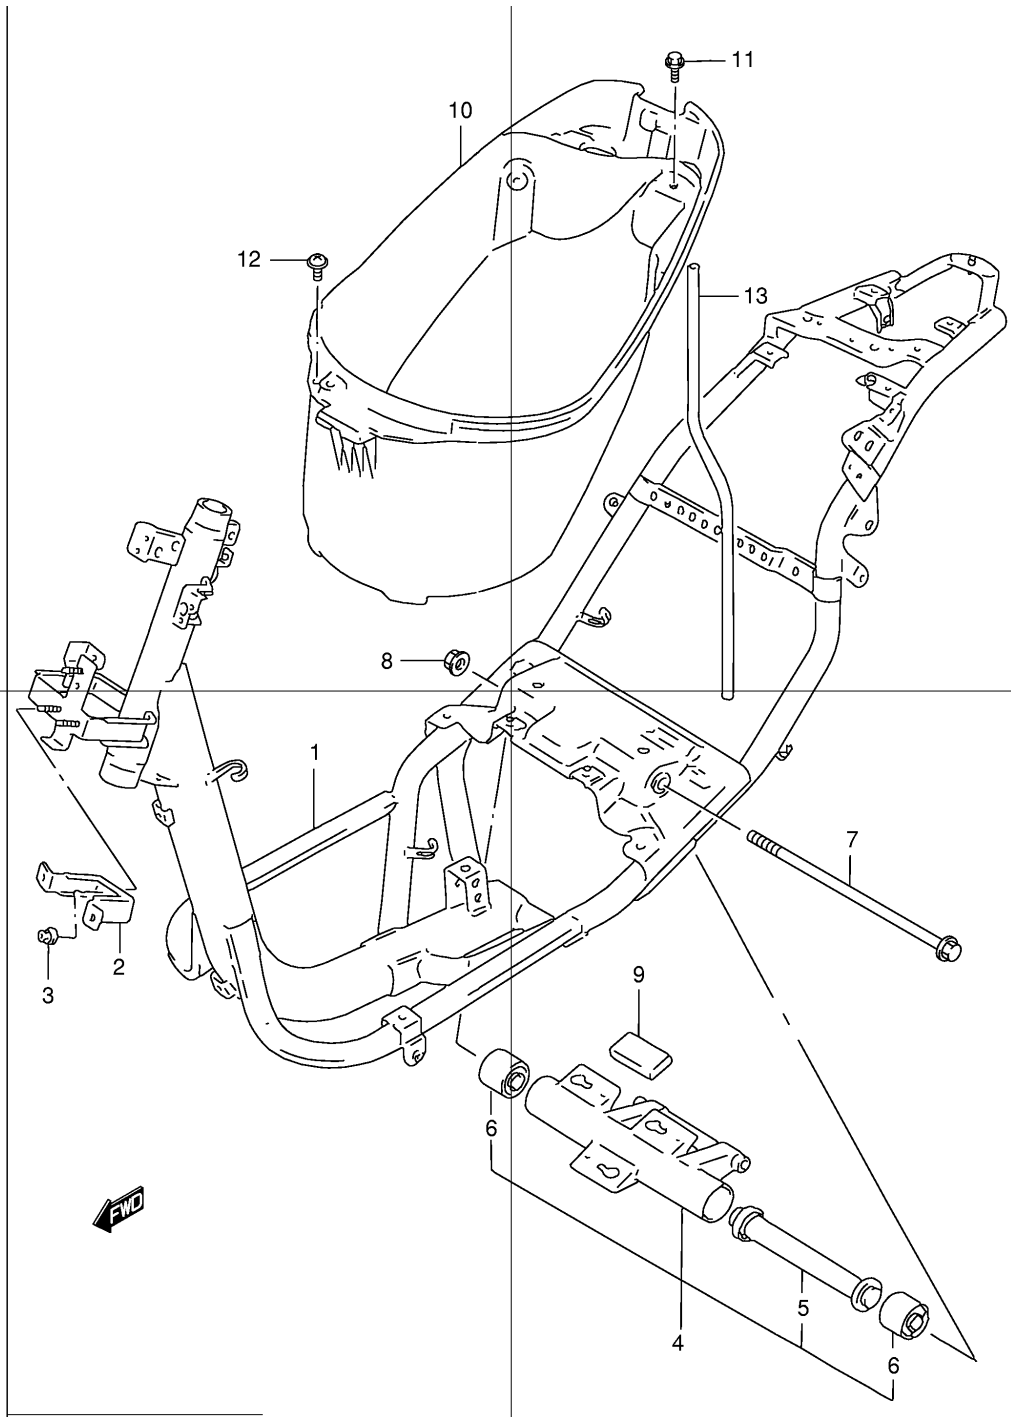


Ref No	Part No	Description
1	41100-43EC0	Frame
2	41150-29C03	Bracket, Front Leg
3	08316-10063	Nut
4	41180-43820	Bracket Set, Crankcase
5	41170-43E10	• . Spacer, Crankcase Bracket
6	09319-10074	• . Bush
7	09103-10154	Bolt (10x245)
8	08319-31107	Nut
9	41185-43E00	Cushion, Swinging Stop
10	92211-43E01	Box, Helmet
11	09116-06001	Bolt (6x12)
12	03541-15163	Screw
13	09352-70113-00B	Hose, Oil Drain (l:2000->50)

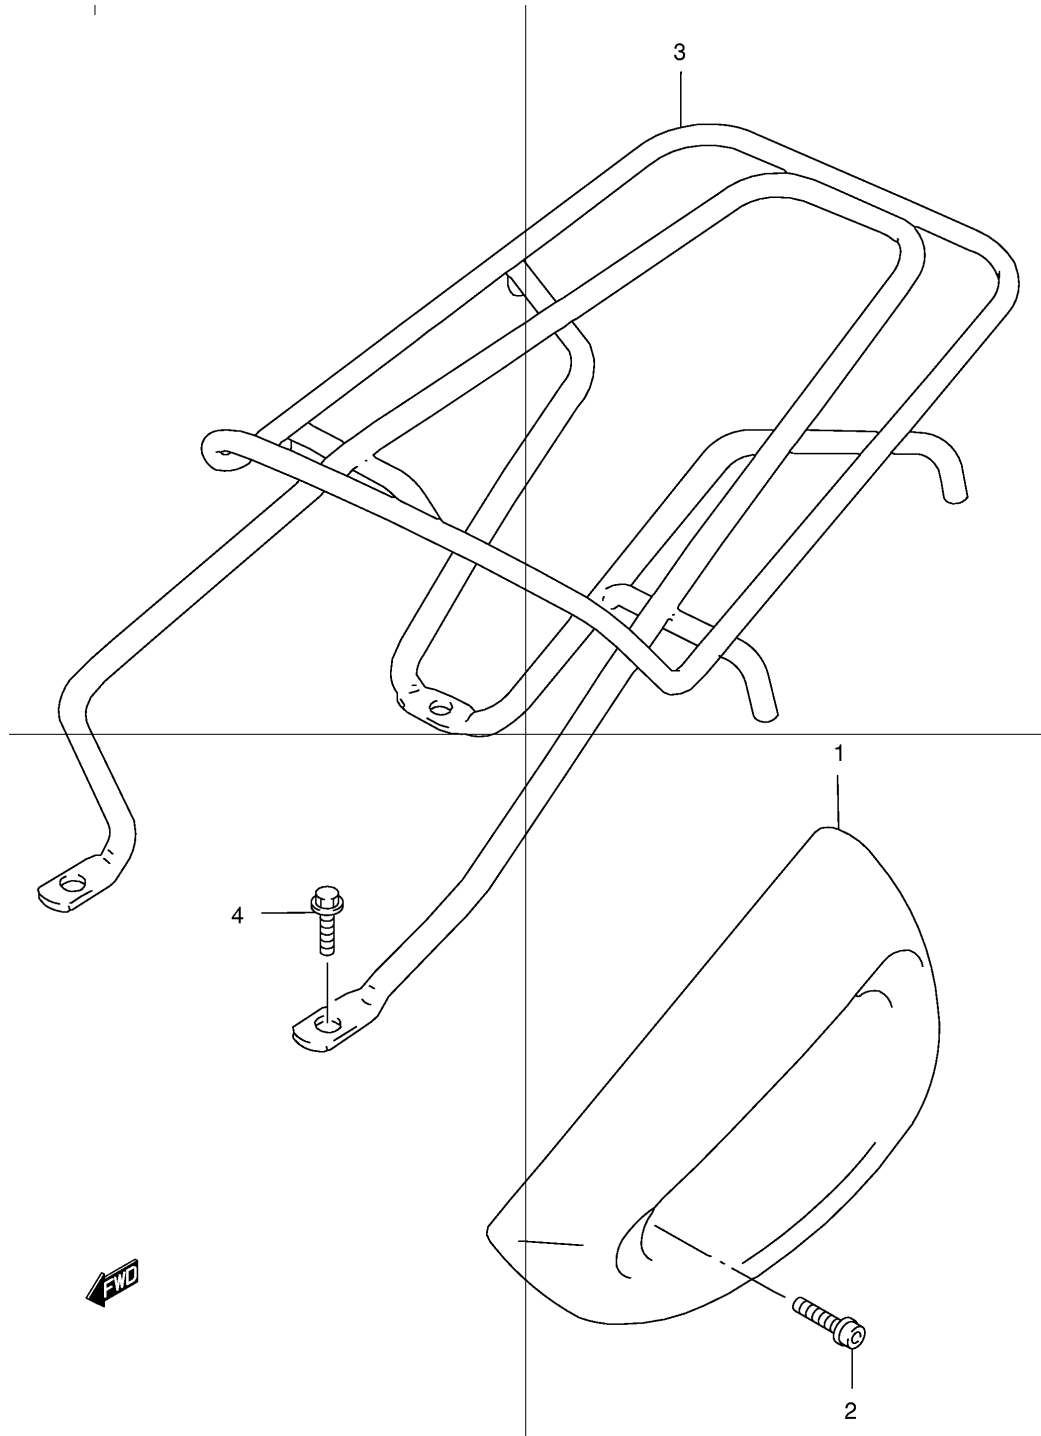


Ref No	Part No	Description
1	43980-43E00-Y0J	Grip, Stand Lh (gray)
2	07120-06203	Bolt
3	46410-43E00	Carrier, Rear
4	01547-06163	Bolt


Ref No Part No Description

1	42100-43E00	Stand, Center
2	42211-43E00	Shaft, Center Stand
3	09443-15048	Spring
4	09100-06078	Bolt (6x33)
5	09140-06013	Nut
6	09321-10002	Cushion
7	04111-25208	Cotter Pin
8	42300-43810	Stand Set, Prop

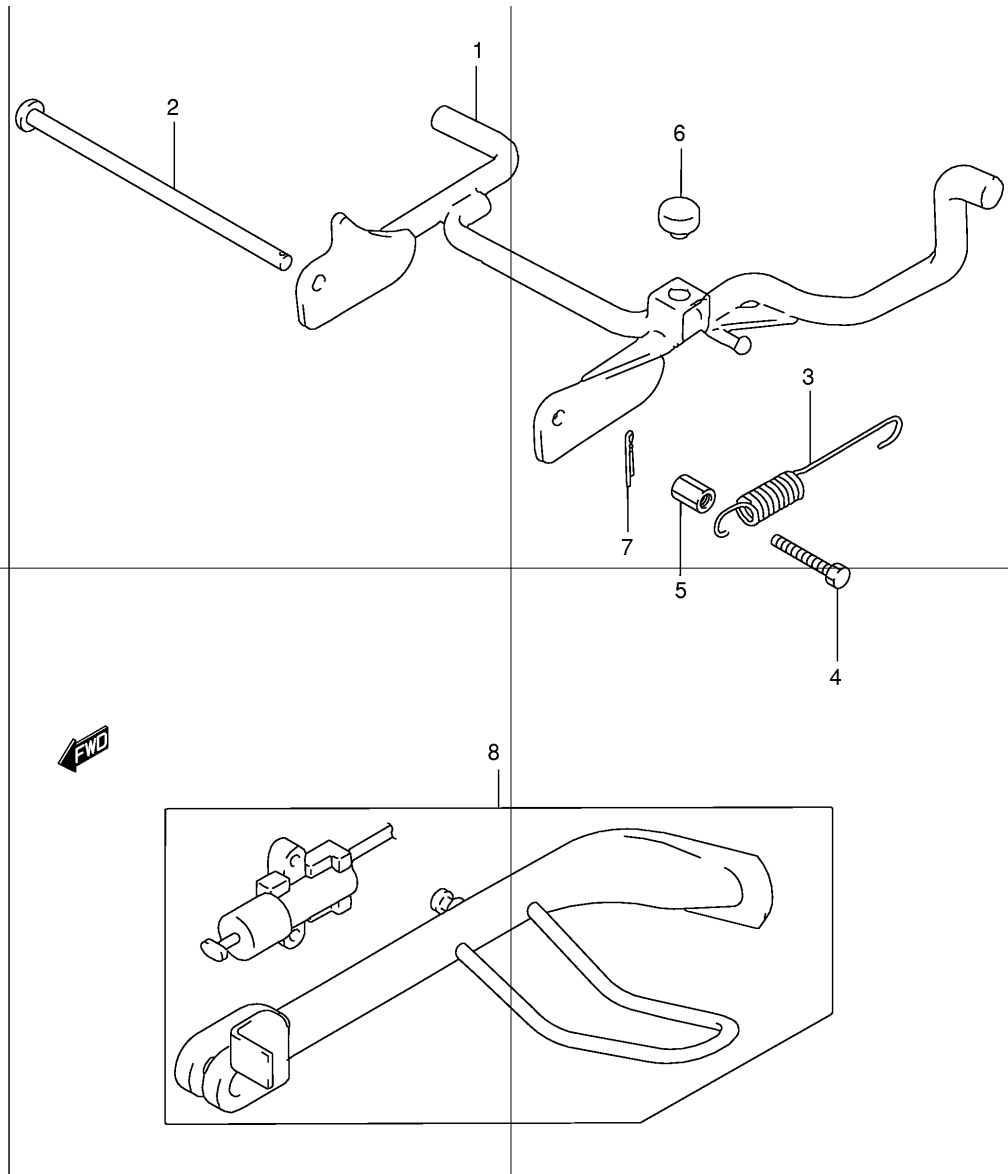


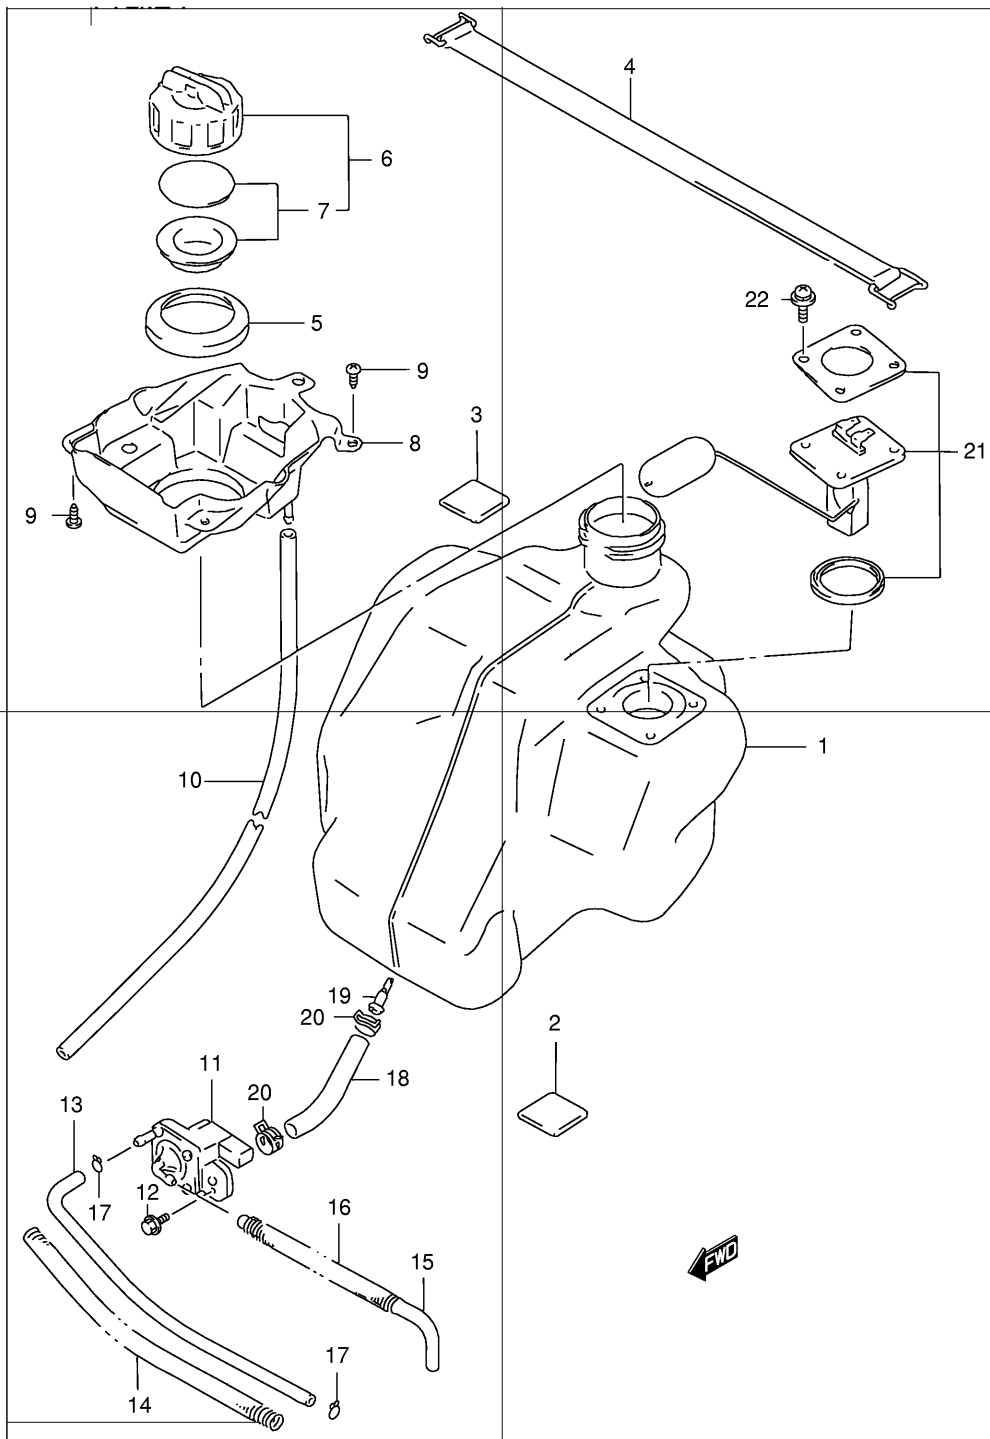


Ref No	Part No	Description
1	44110-43E02	Tank, Fuel
2	44281-29C00	Cushion
3	44612-13600	Cushion, Fuel Tank
4	44292-43E00	Band, Fuel Tank
5	44261-25E00	Rubber, Fuel Tank Inlet
6	44200-39811	Cap Set, Fuel Tank
7	44660-36810	Gasket Set, Tank Cap
8	44262-43E02	Tray, Fuel Drain
9	03541-15123	Screw
10	44427-43E00	Hose, Fuel Drain
11	44300-43E02	Cock Assy, Fuel
12	01550-06123	Bolt
13	44425-43E00	Hose, Vacuum
14	09440-10019	Spring
15	44422-43E00	Hose, Outlet
16	09440-10012	Spring
17	09401-08401	Clip
18	09355-70125-600	Hose (l:600->00)
19	44322-17200	Filter, Fuel
20	09401-11407	Clip
21	34810-43E00	Gauge Assy, Fuel Level
22	02112-76163	Screw

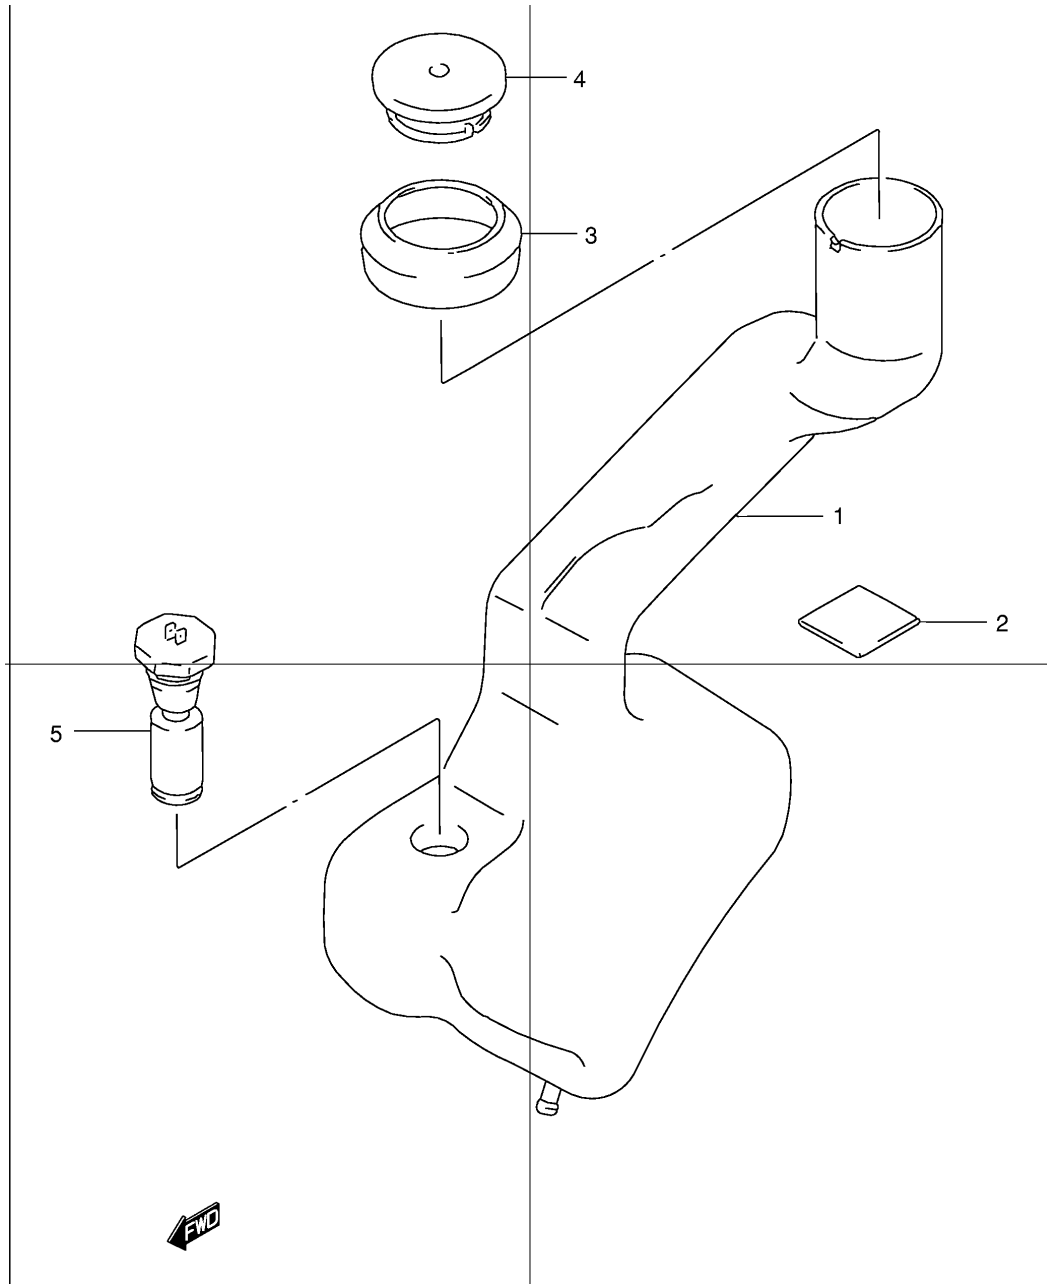


Ref No	Part No	Description
1	44611-43E01	Tank, Oil
2	44281-29C00	Cushion
3	44667-43E00	Rubber, Oil Tank Inlet
4	44651-39C01	Cap, Oil Tank
5	37880-43E00	Switch Assy, Oil Level

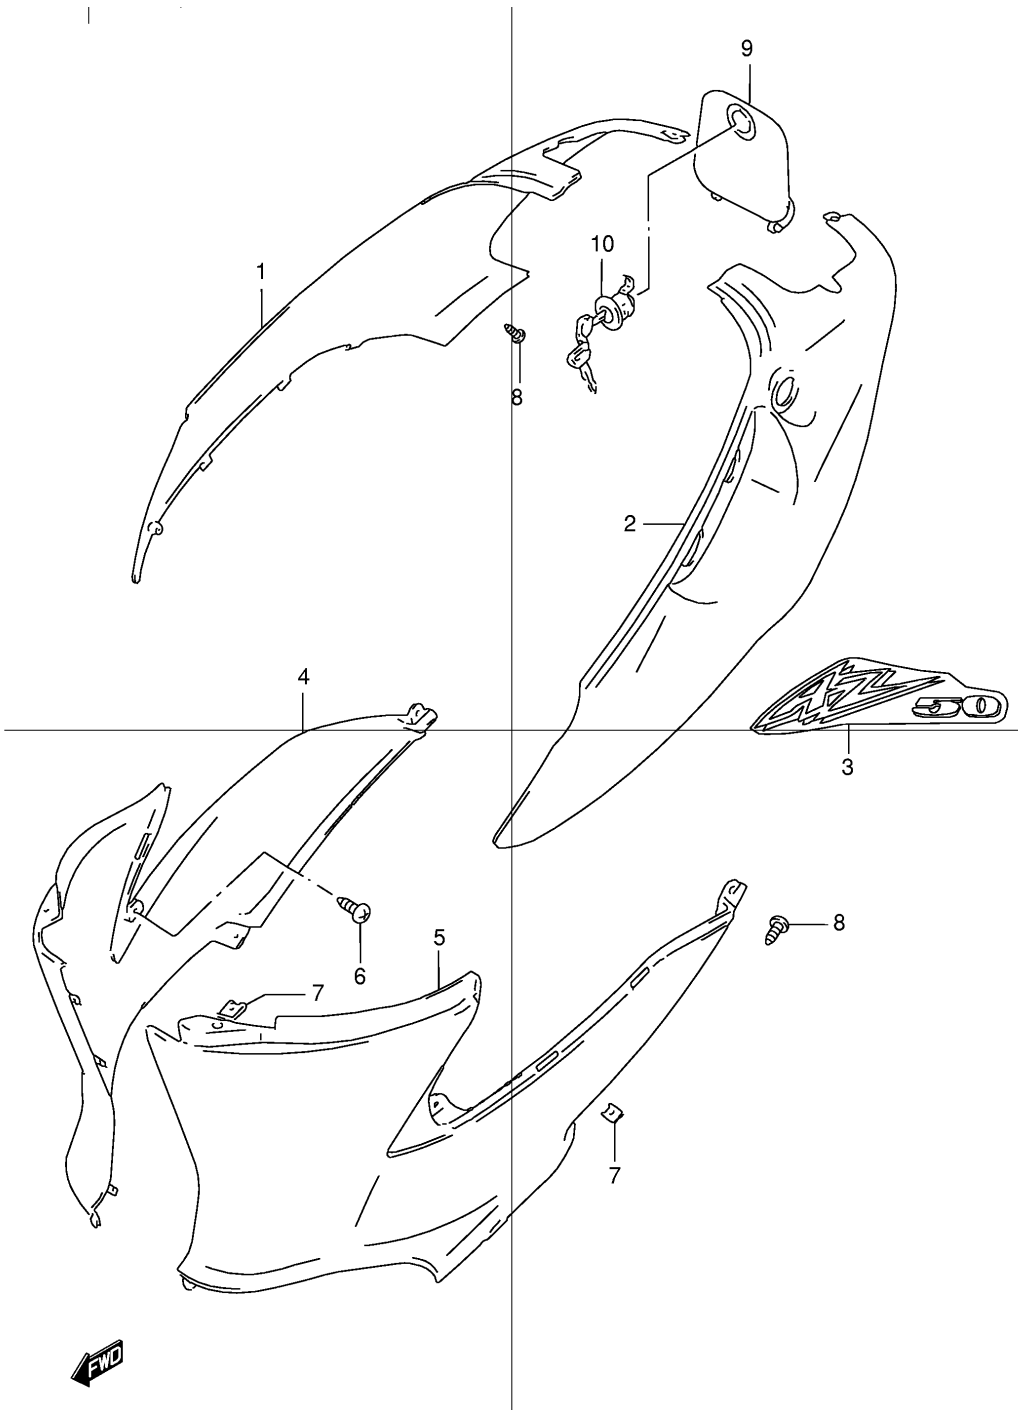

Ref No	Part No	Description
1	47111-43E00-1LE	Cover, Side Rh (blue)
1	47111-43E00-Y7M	Cover, Side Rh (red)
2	47211-43E01-1LE	Cover, Side Lh (blue)
2	47211-43E01-Y7M	Cover, Side Lh (red)
3	68131-43EB0-N1W	Emblem, Frame Cover
4	47121-43E00-291	Cover, Side Lower Rh (black)
5	47221-43E00-291	Cover, Side Lower Lh (black)
6	03541-15123	Screw
7	09148-05004	Nut
8	03541-14163	Screw
9	47371-43E10-1LE	Lid, Upper Cover (blue)
9	47371-43E10-Y7M	Lid, Upper Cover (red)
10	92100-25840	Lock Set, Upper Cover Lid

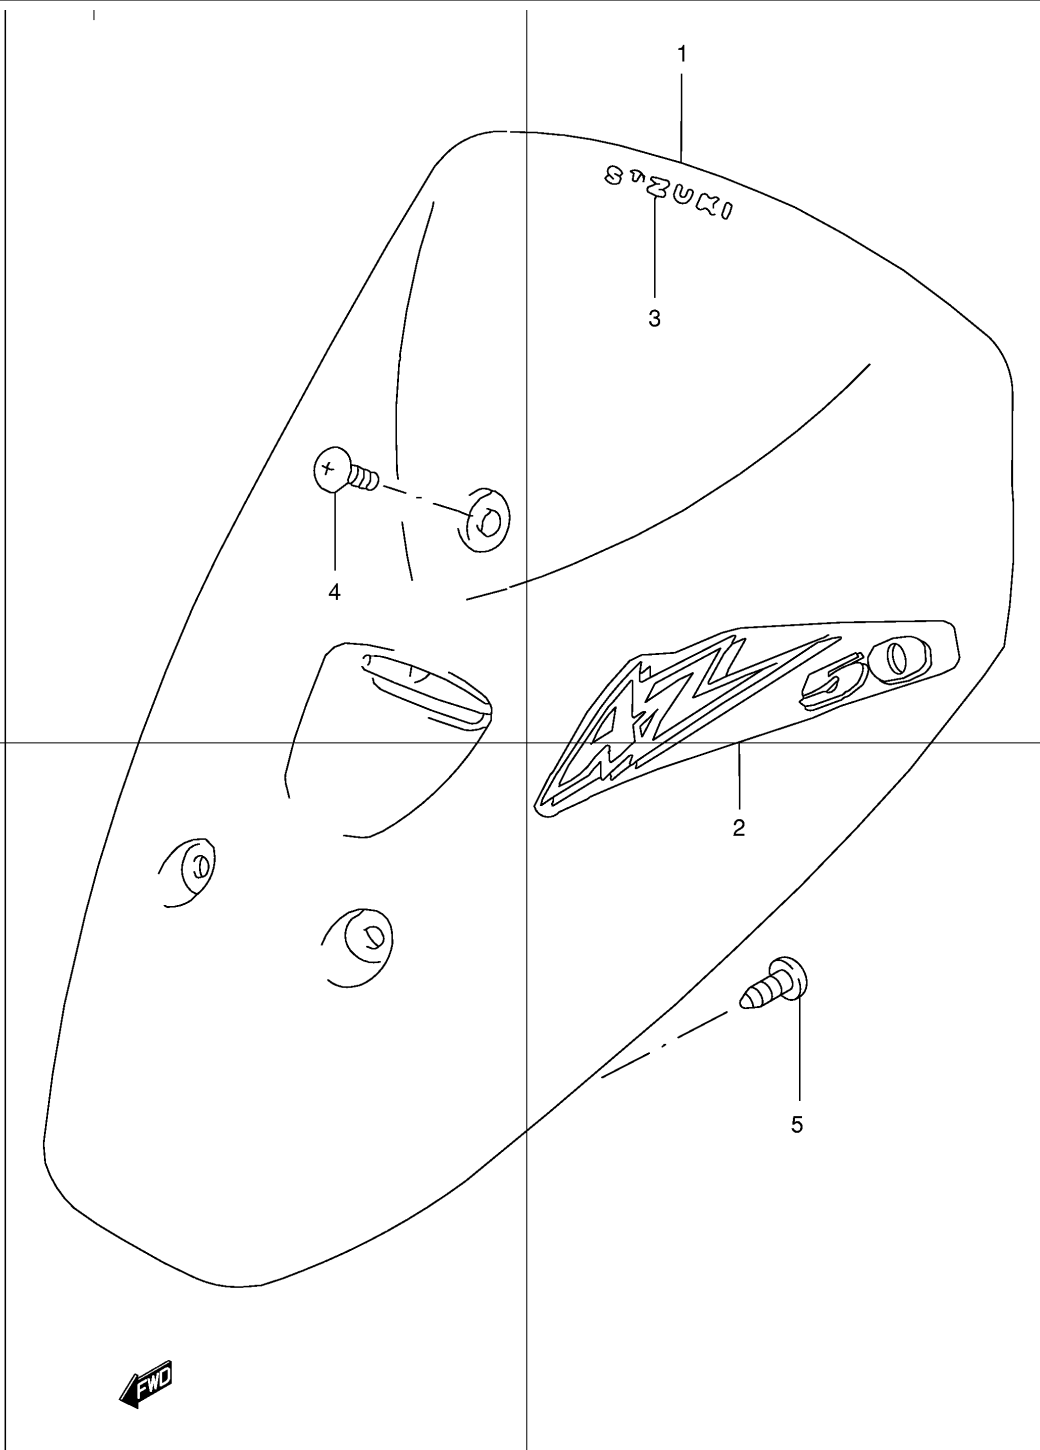


Ref No	Part No	Description
1	48111-43EB0-1LE	Shield, Leg Front (blue)
1	48111-43EB0-Y7M	Shield, Leg Front (red)
2	68641-43EB0-N1W	Emblem, Leg Shield
3	68165-16B00-13L	Emblem (silver)
3	68165-16B00-0RN	Emblem (silver)
4	09139-06083	Screw (6x16)
5	03541-04163	Screw

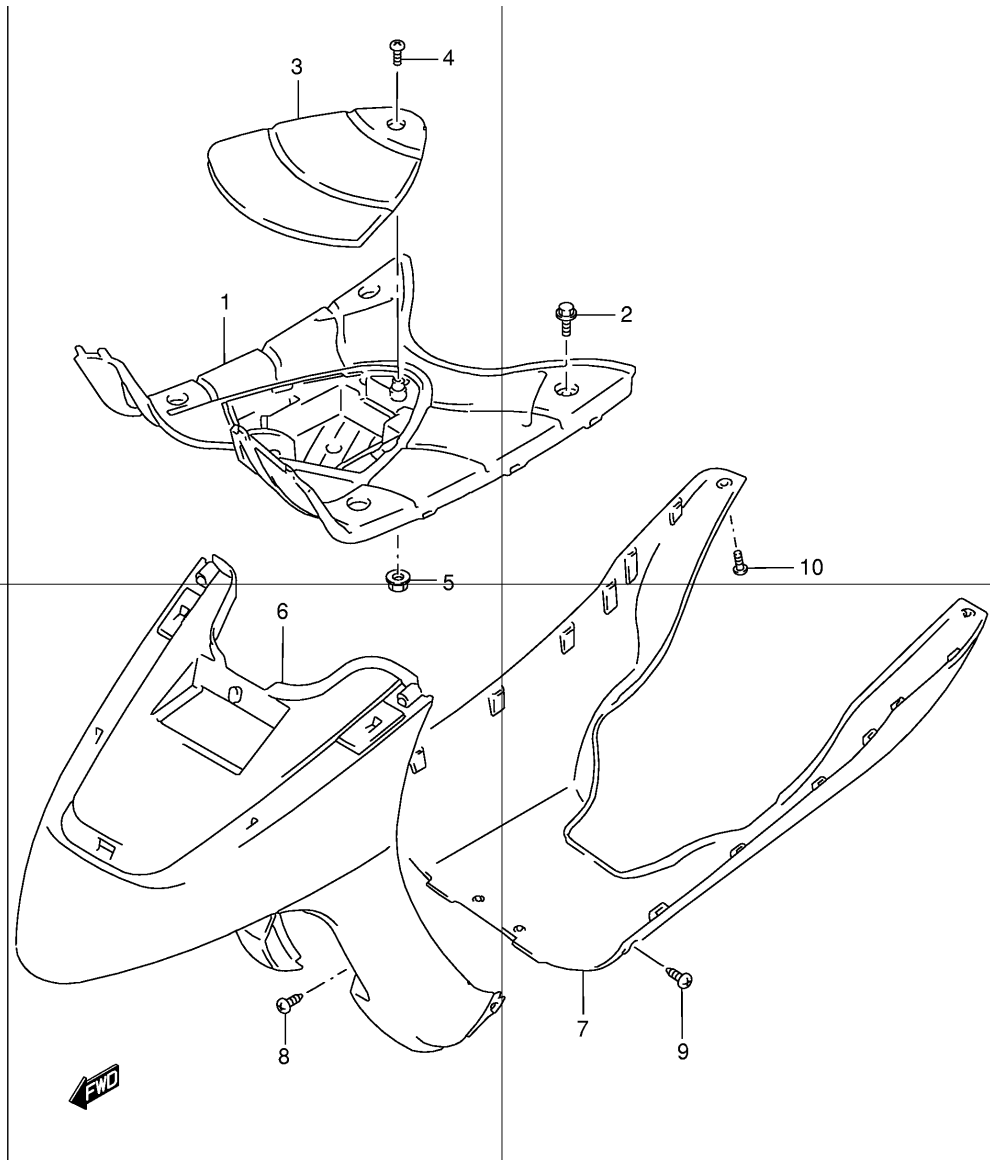


Ref No	Part No	Description
1	48121-43E00-291	Shield, Leg Rear (black)
2	09116-06165	Bolt (6x16)
3	48125-43E00-291	Lid, Maintenance (black)
4	09132-06015	Screw
5	08316-10063	Nut
6	48137-43EC0-26B	Shield, Leg Lower (gray)
7	48138-43E11-26B	Shield, Leg Lower Rear (gray)
8	03541-04163	Screw
9	02142-06123	Screw
10	03242-05163	Screw


Ref No	Part No	Description
1	92111-43EC0-291	Cover, Leg Shield (black)
2	92161-43EB0-291	Rack, Leg Shield (black)
3	03541-05203	Screw
4	02142-06123	Screw
5	09250-18003	Plug
6	03541-04163	Screw
7	92171-25E00-291	Hook, Leg Shield (black)
8	09116-06165	Bolt (6x16)

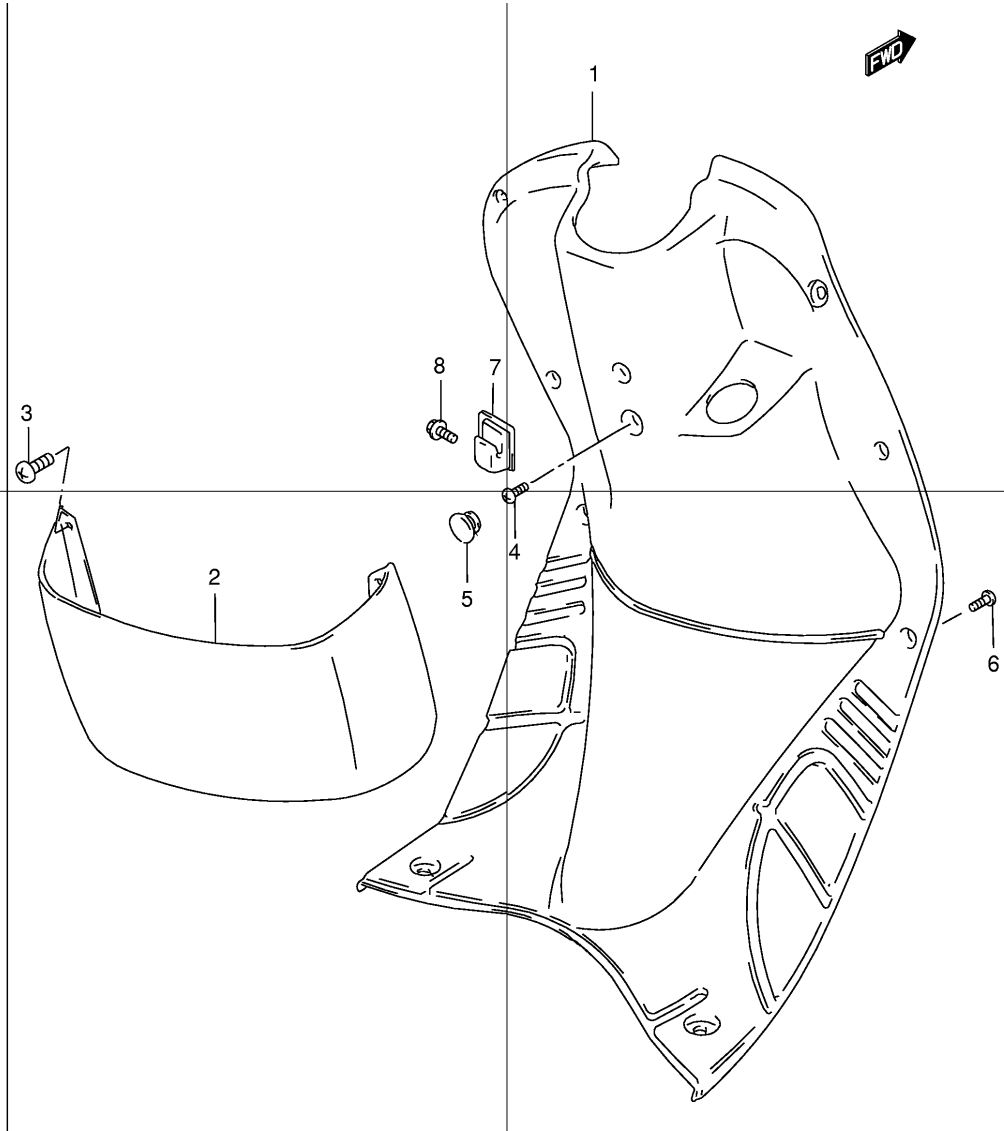


Ref No	Part No	Description
1	53181-29C02	Fender, Movable Front
2	53182-43EA1	Fender, Fixed Front
3	01550-06123	Bolt
4	02142-05163	Screw

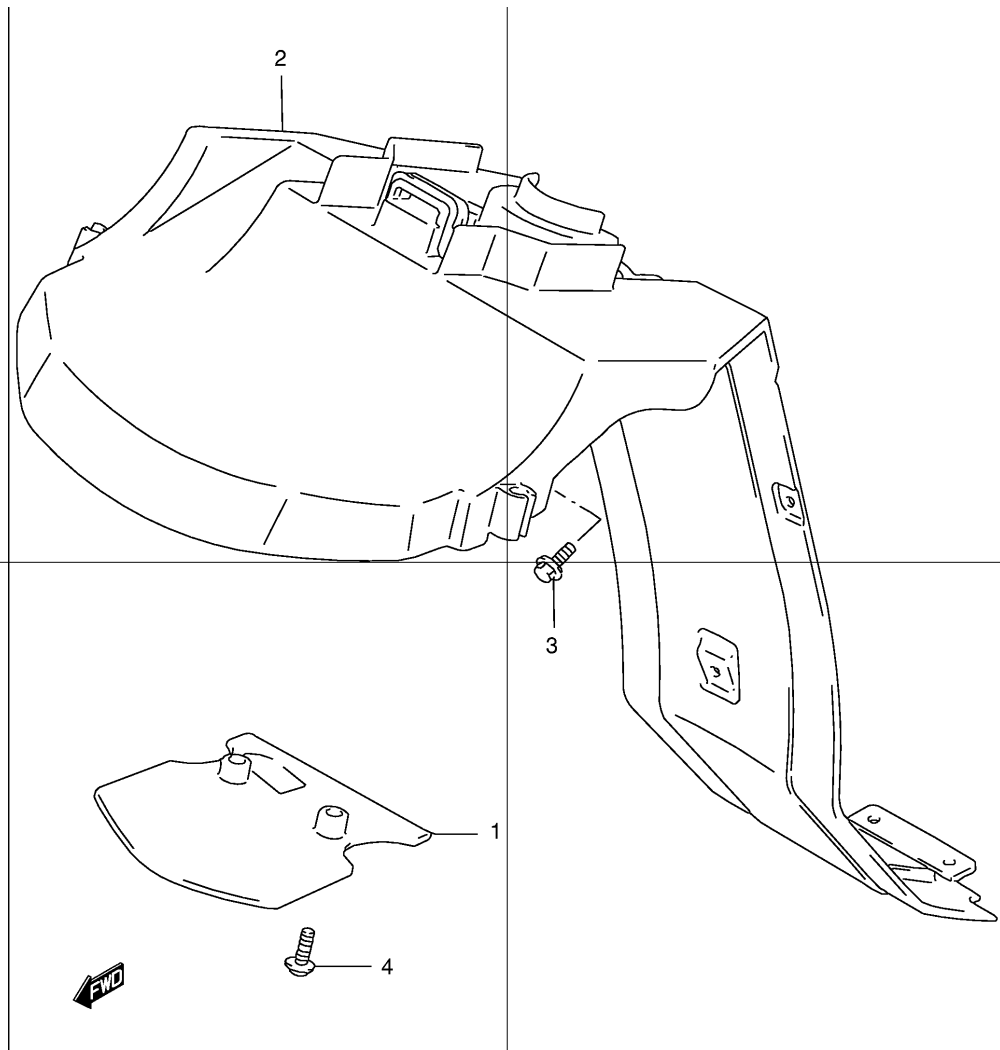


Ref No	Part No	Description
1	56110-43EA0	Handlebar
2	09103-10116	Bolt (10x43)
3	09159-10058	Nut
4	56123-29C00	Screw, Handlebar (8x35)
5	56500-39C21	Mirror Assy, Rear View Rh
6	56600-39C21	Mirror Assy, Rear View Lh
7	58110-43EA0	Cable, Front Brake
8	09209-10001	Pin
9	09150-05101	Nut
10	58300-43E00	Cable Assy, Throttle
11	58510-43E00	Cable, Rear Brake
12	09209-10001	Pin
13	09150-05101	Nut
14	58575-10E00	Plate, Rear Brake Cable
15	07130-06123	Bolt
16	09407-25401	Clamp (l:235)
17	58621-43E00	Guide, Rear Brake Cable
18	01550-06123	Bolt

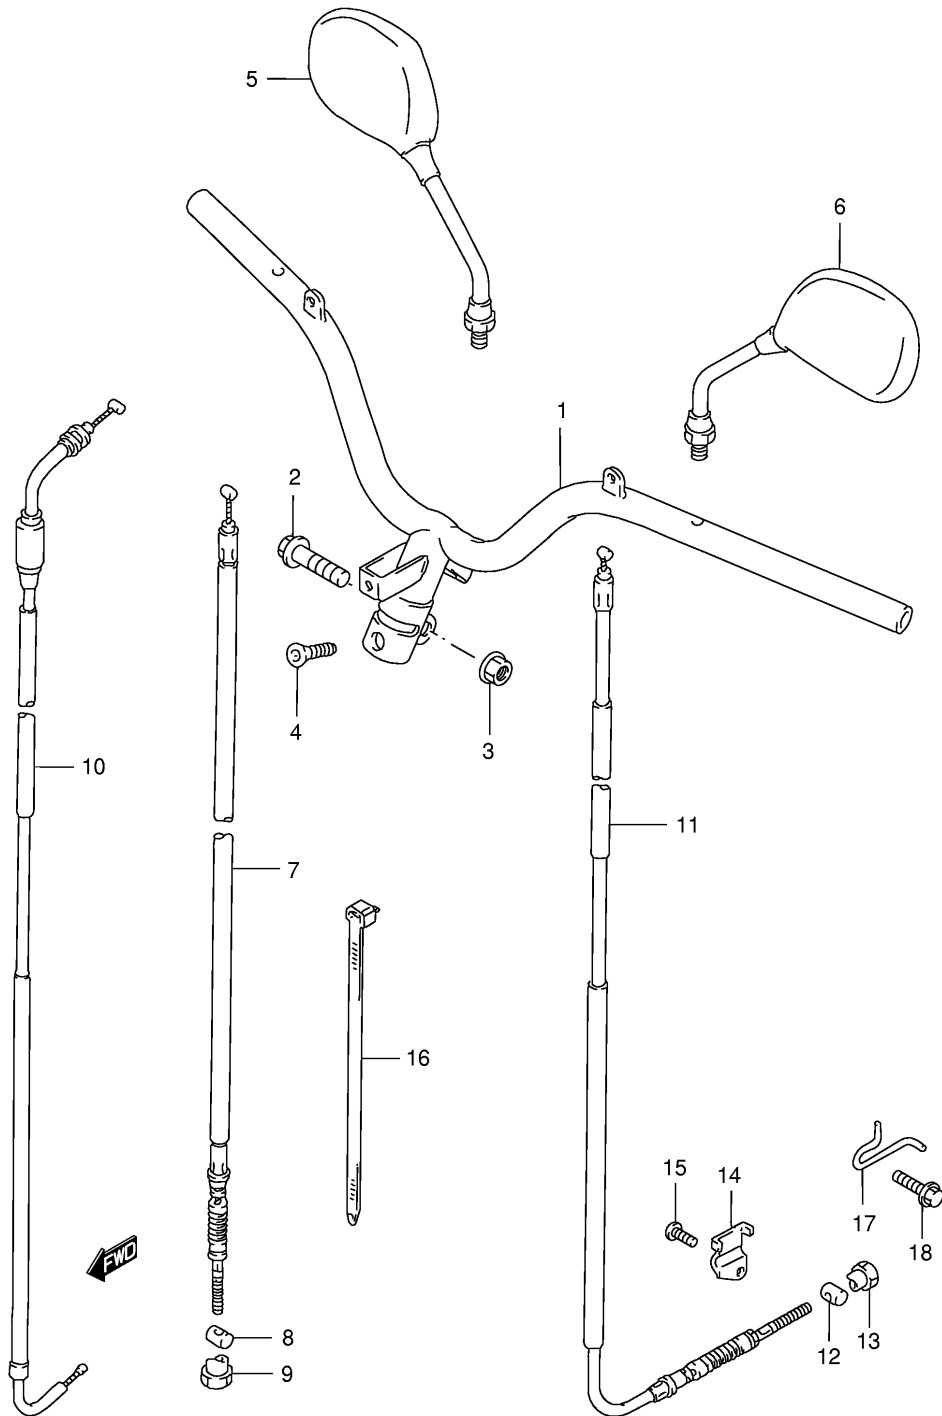

Ref No	Part No	Description
1	56311-39C20-1LE	Cover, Handle Front (blue)
1	56311-39C20-Y7M	Cover, Handle Front (red)
2	56300-43820-291	Cover Set, Handle Rear (black)
3	02142-05123	Screw
4	03512-05163	Screw
5	03541-04163	Screw


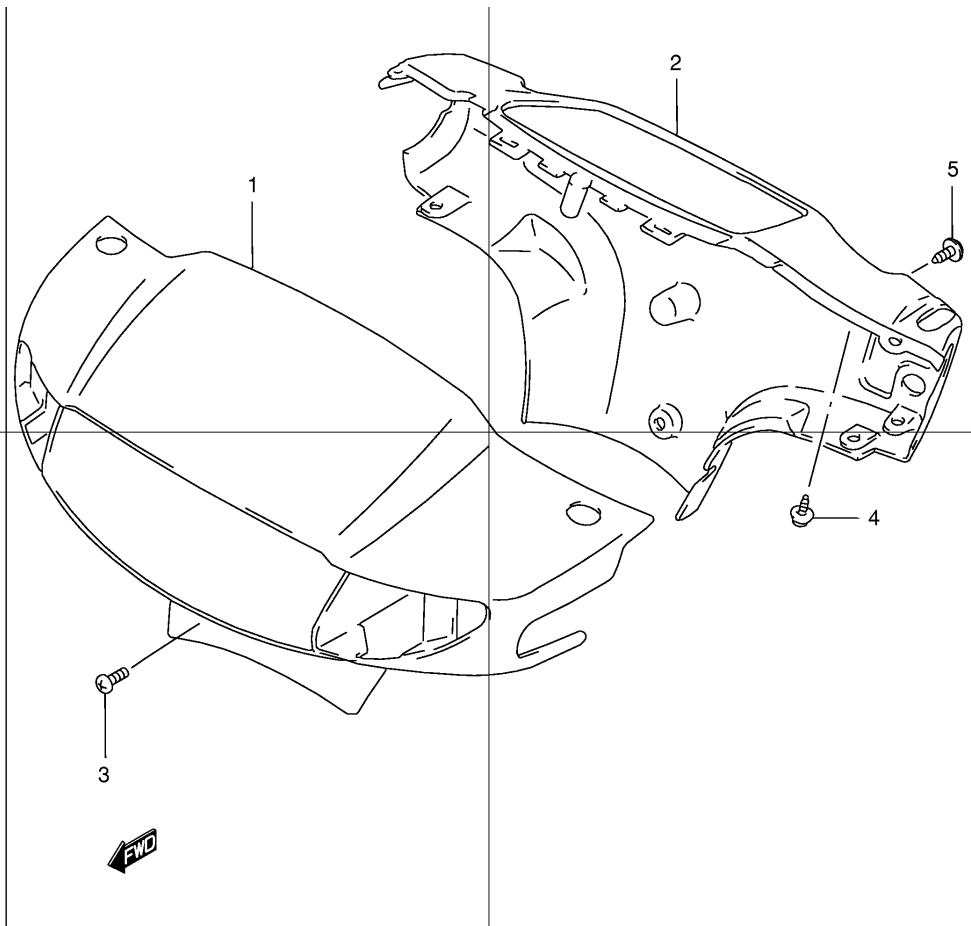


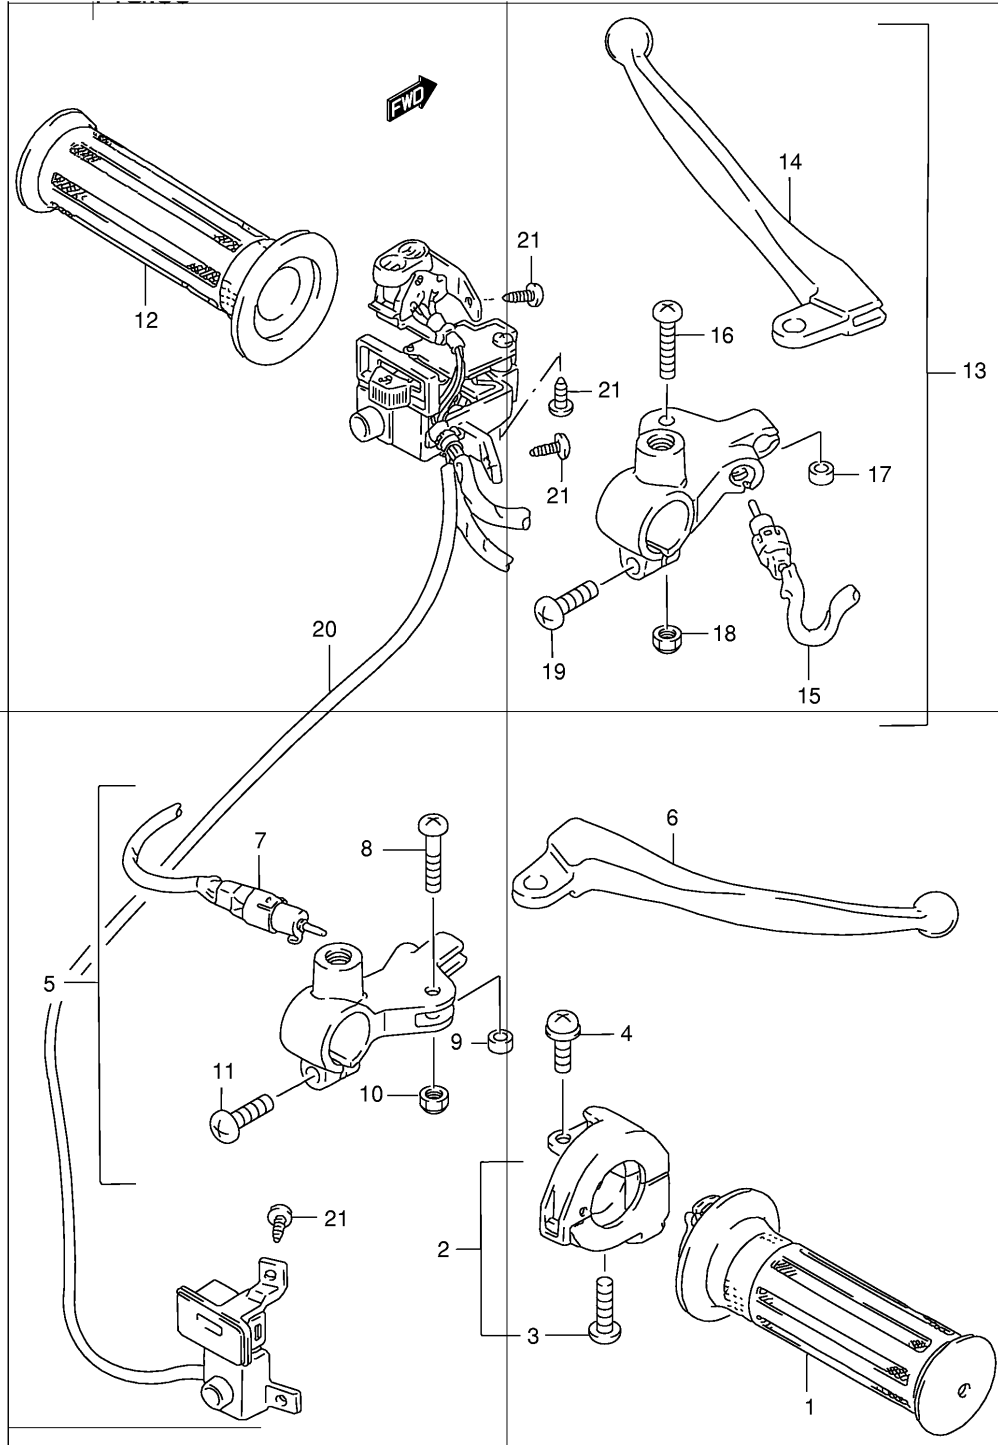


HANDLE LEVER


Ref No	Part No	Description
1	57110-09401	Grip, Throttle
2	57100-43EA0	Case Assy, Throttle
3	02112-05207	. . Screw
4	09136-05040	Screw
5	57300-25E00	Lever Assy, Front Brake
6	57421-02410	. . Lever, Front Brake
7	57470-25E00	. . Switch Assy, Brake
8	02112-05257	. . Screw
9	57435-12900	. . Spacer
10	08319-21057	. . Nut
11	02112-06207	. . Screw
12	57211-11B00-291	Grip, Lh (black)
13	57500-25E10	Lever Assy, Rear Brake
14	57621-02410	. . Lever, Rear Brake
15	57470-25E00	. . Switch Assy, Brake
16	02112-05257	. . Screw
17	57435-12900	. . Spacer
18	08319-21057	. . Nut
19	02112-06207	. . Screw
20	37200-43EA0	Switch Assy, Handle
21	03541-04123	Screw

Ref No	Part No	Description
1	63110-43E00-291	Fender Assy, Rear Upper (black)
2	63112-43E00	Fender, Rear Lower
3	63161-43E00	Bolt, Rear Fender
4	09111-06066	Bolt
5	03541-05163	Screw
6	09160-06501	Washer (6.5x24x1.6)

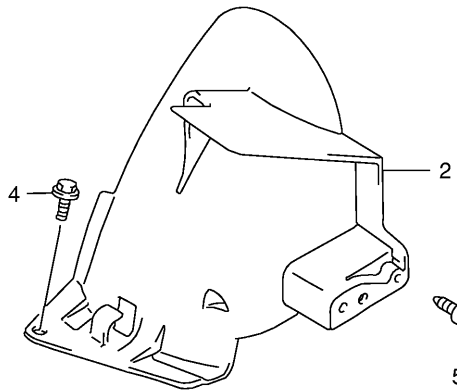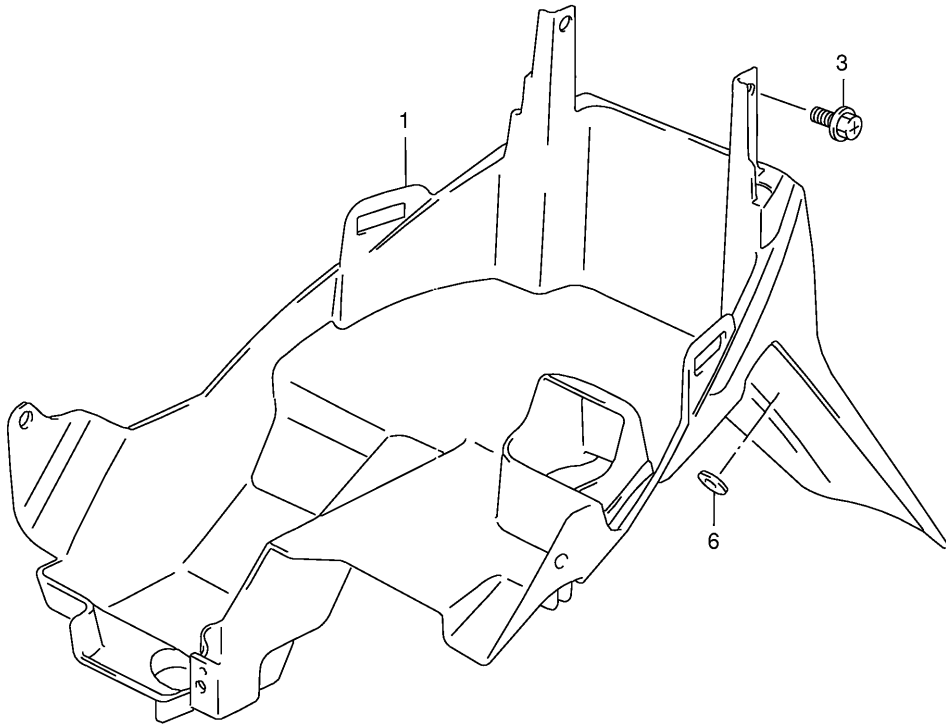


Ref No	Part No	Description
1	68921-36CE0	Label, General Warning
2	68911-43EE0	Label, Loading Capacity
3	68915-14F00	Label, Engine Starting
3	68915-14F50	Label, Engine Starting
4	99011-43E61-01S	Manual, Owner's

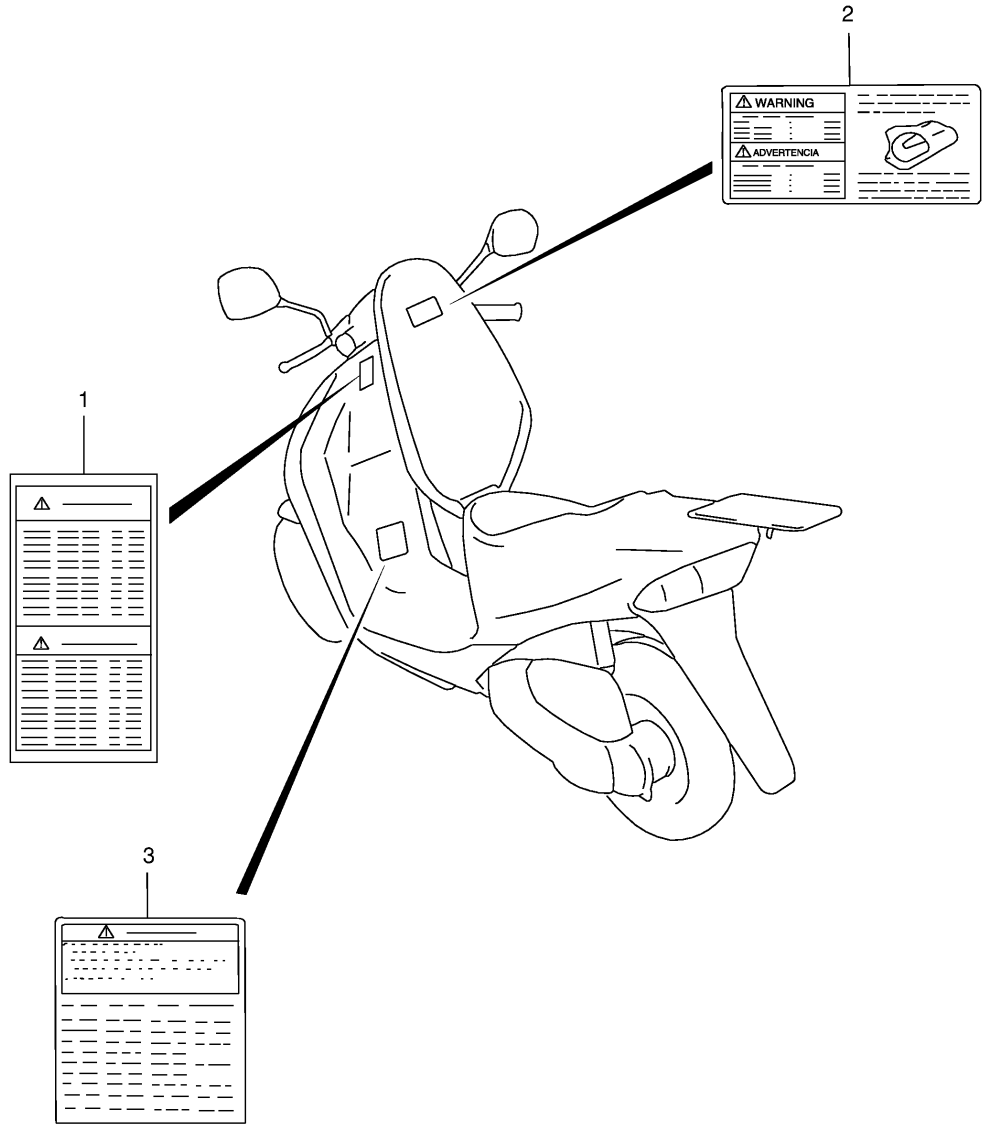


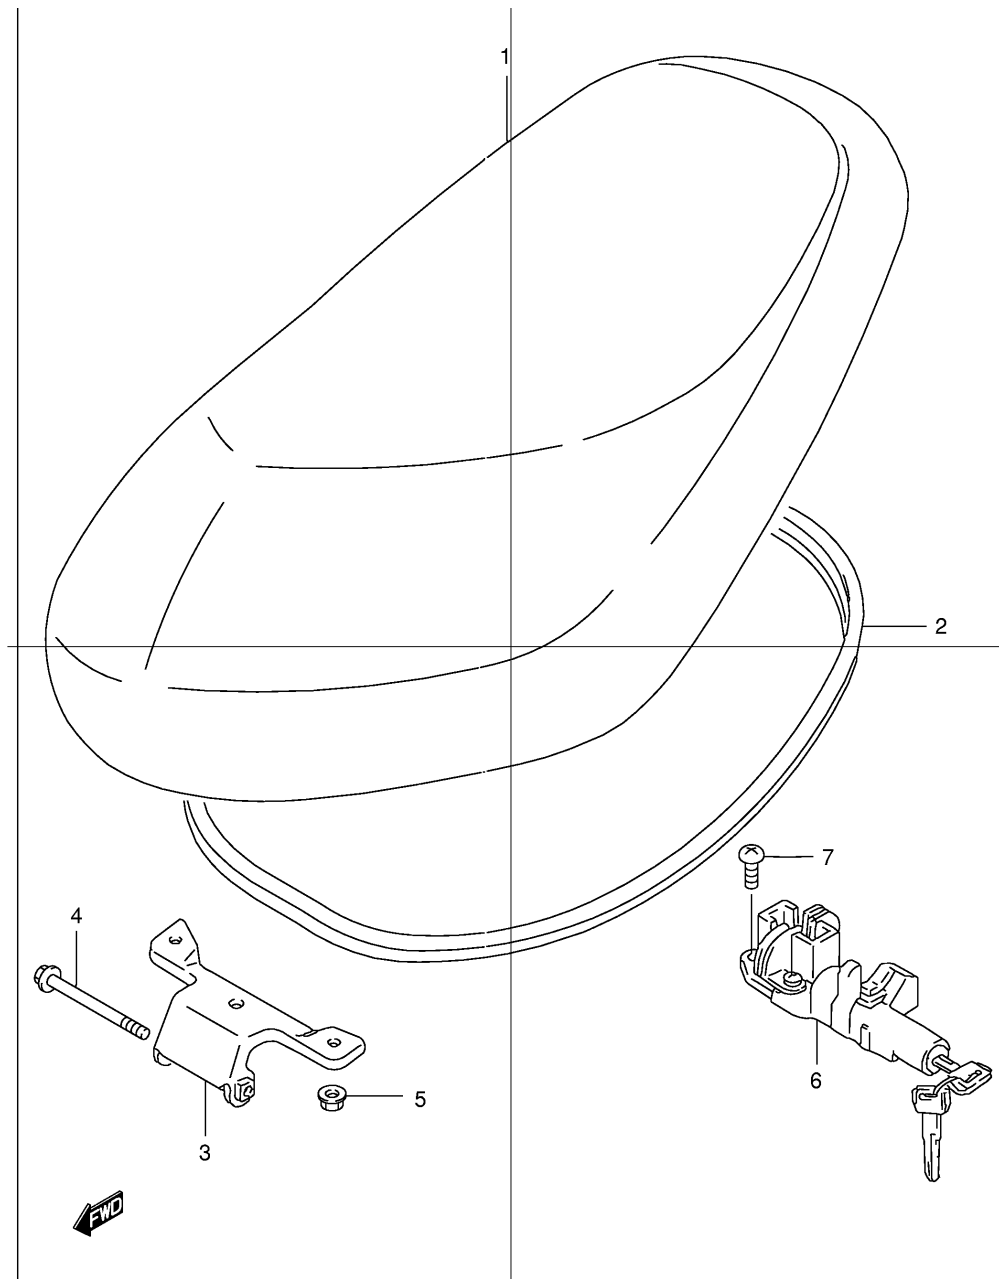

Ref No	Part No	Description
1	45100-43E00-R48	Seat Assy (black)
2	45211-43E00	Molding, Seat
3	45285-43E00	Bracket, Seat Support Front
4	45215-43E00	Bolt, Seat Support (6x64.5)
5	08316-10063	Nut
6	45700-43821	Lock Set, Seat
7	02142-06163	Screw

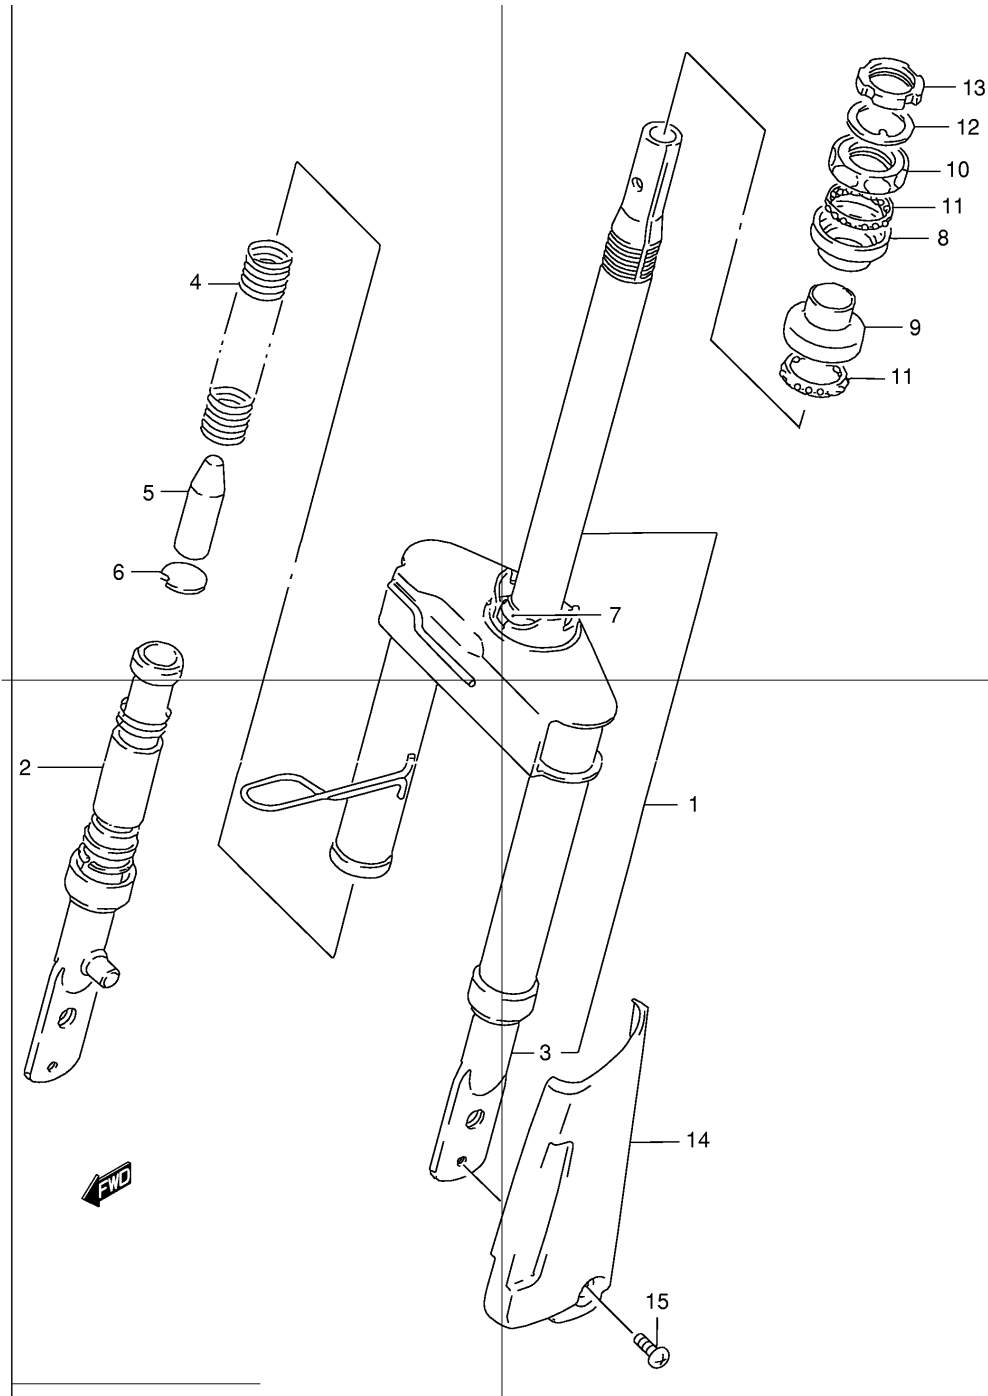


Ref No	Part No	Description
1	51100-43860	Fork Set, Front
2	51110-36C00	. Tube Assy, Lower Rh
3	51120-36C00	. Tube Assy, Lower Lh
4	51171-36C00	. Spring
5	51292-10B00	. Stopper, Rubber
6	09242-26002	. Washer
7	51622-29C10	. Race, Steering Outer Lower
8	51611-02200	Race, Steering Inner Upper
9	51612-02200	Race, Steering Inner Lower
10	51621-02200	Race, Steering Outer Upper
11	09269-34001	Bearing
12	09166-26001	Washer
13	99800-10420	Nut, Steering Stem Lock
14	52450-39C00-291	Cover Set, Front Fork (black)
15	02142-06123	Screw

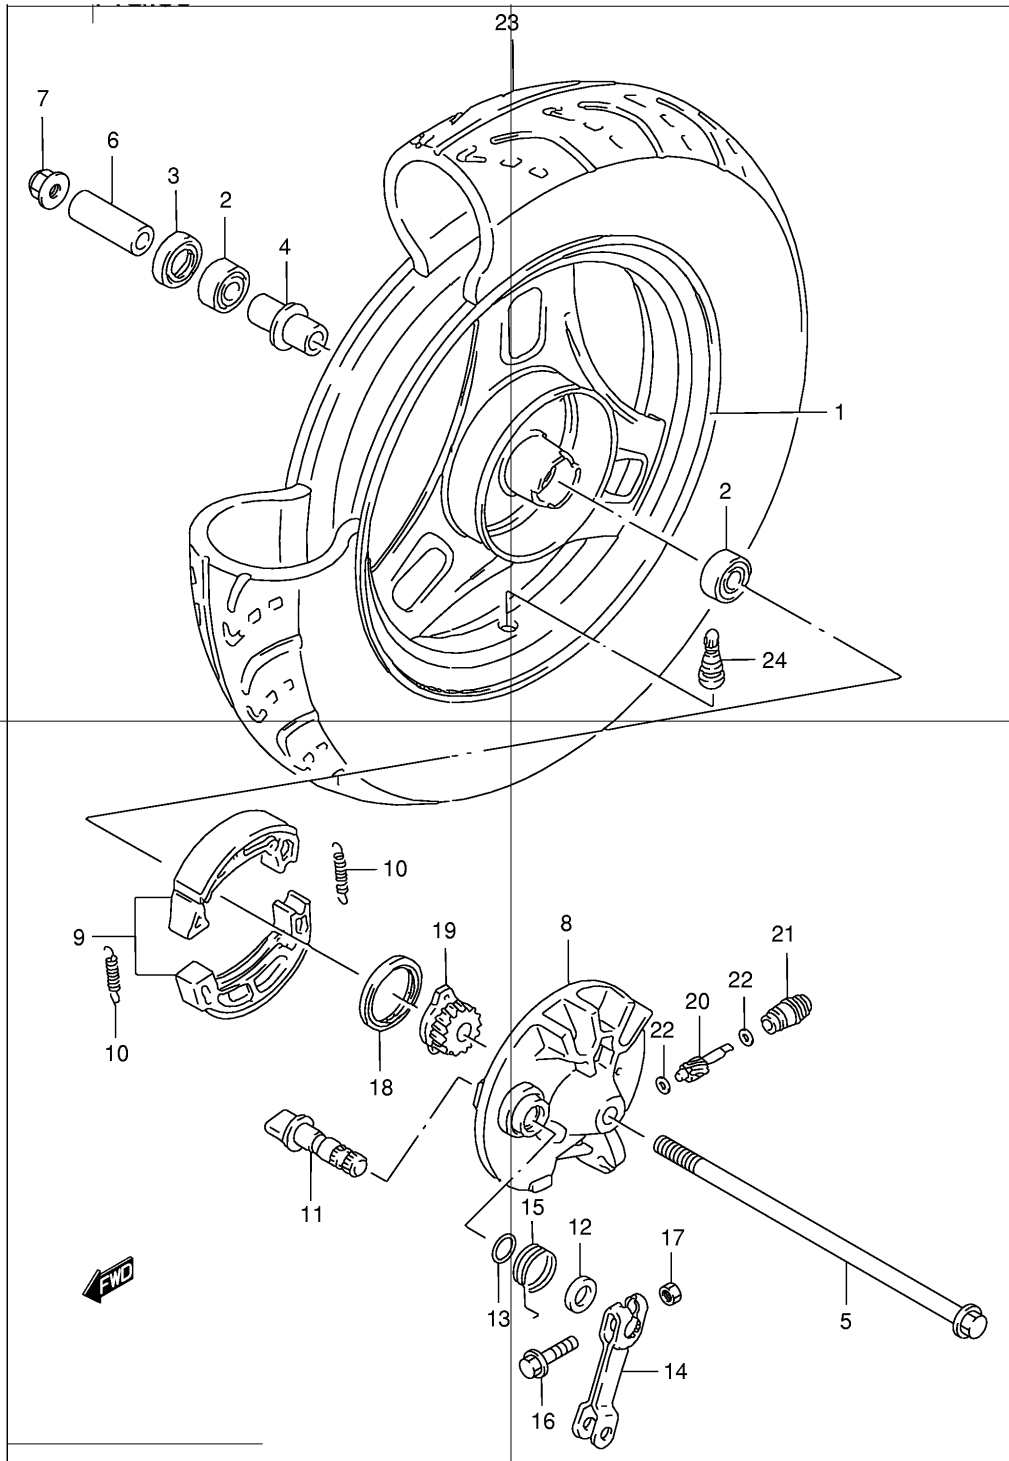


Ref No	Part No	Description
1	54140-39C11-12R	Wheel, Front (10x2.15)(silver)
2	08113-62007	Bearing
3	09285-16002	Oil Seal (16x30x8)
4	54730-16A00	Spacer, Wheel Bearing
5	54711-16A00	Axle, Front
6	54741-36C00	Spacer, Front Axle
7	08319-31107	Nut
8	54210-36C00-12R	Panel, Front Brake Anchor (silver)
9	54400-39820	Shoe Set, Brake
10	09443-07044	Spring
11	54441-39C00	Cam, Front Brake
12	09160-12011	Washer (12.5x20x1)
13	09280-12012	O Ring (d:2.4,id:11.8)
14	54451-29C00	Lever, Front Brake Cam
15	54484-43E00	Spring, Cam Lever Return
16	01550-06253	Bolt
17	08310-00063	Nut
18	09285-34002	Oil Seal (34x42x5)
19	54611-39C00	Gear, Speedometer (nt:16)
20	54621-39C00	Pinion, Speedometer (nt:9)
21	54632-02201	Bush, Pinion Outer
22	09160-05001	Washer (5.1x9x0.4)
23	55110-43E00	Tire, Front (3.00-10 32j)
23	55110-43E20	Tire, Front (3.00-10 32j)
24	43130-24A00	Valve Assy, Wheel Rim (tr412)

Dunlop
Inoue

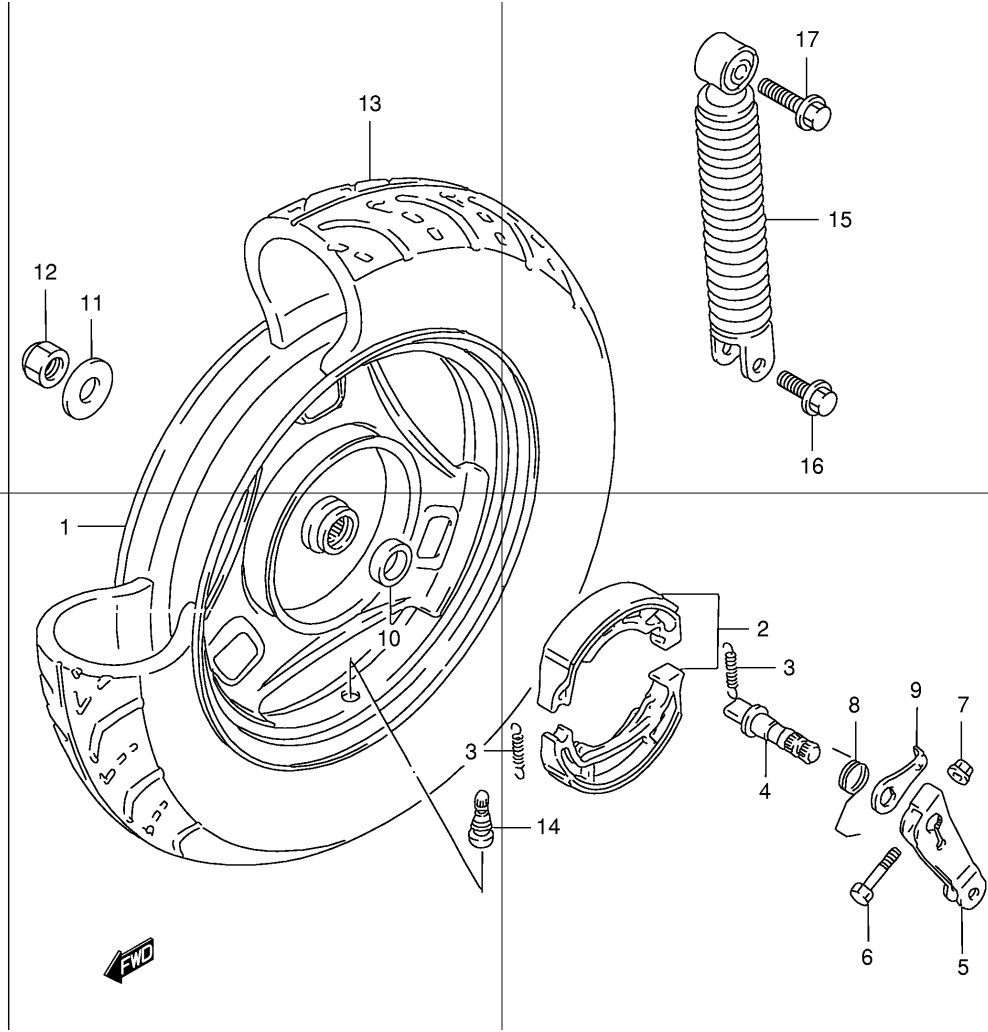

Ref No	Part No	Description	
1	64140-43E00-12R	Wheel, Rear (10x2.15)(silver)	
2	64400-41820	Shoe Set, Rear Brake	
3	09443-07044	Spring	
4	64441-43E00	Cam, Rear Brake	
5	64451-02111	Lever, Rear Brake Cam	
6	09100-06139	Bolt (6x31)	
7	08316-10063	Nut	
8	64484-43E00	Spring, Lever Return	
9	64492-17B02	Plate, Indicator	
10	64741-43E00	Spacer, Rear Axle Inner	
11	09160-16039	Washer	
12	08319-21168	Nut	
13	55110-43E00	Tire, Rear (3.00-10 32j)	Dunlop
13	65110-43E20	Tire, Rear (3.00-10 32j)	Inoue
14	43130-24A00	Valve Assy, Wheel Rim (tr412)	
15	62100-43E00-019	Absorber Assy, Rear Shock	(black)
16	01550-10303	Bolt, Lower (10x30)	
17	01550-10353	Bolt, Upper (10x35)	

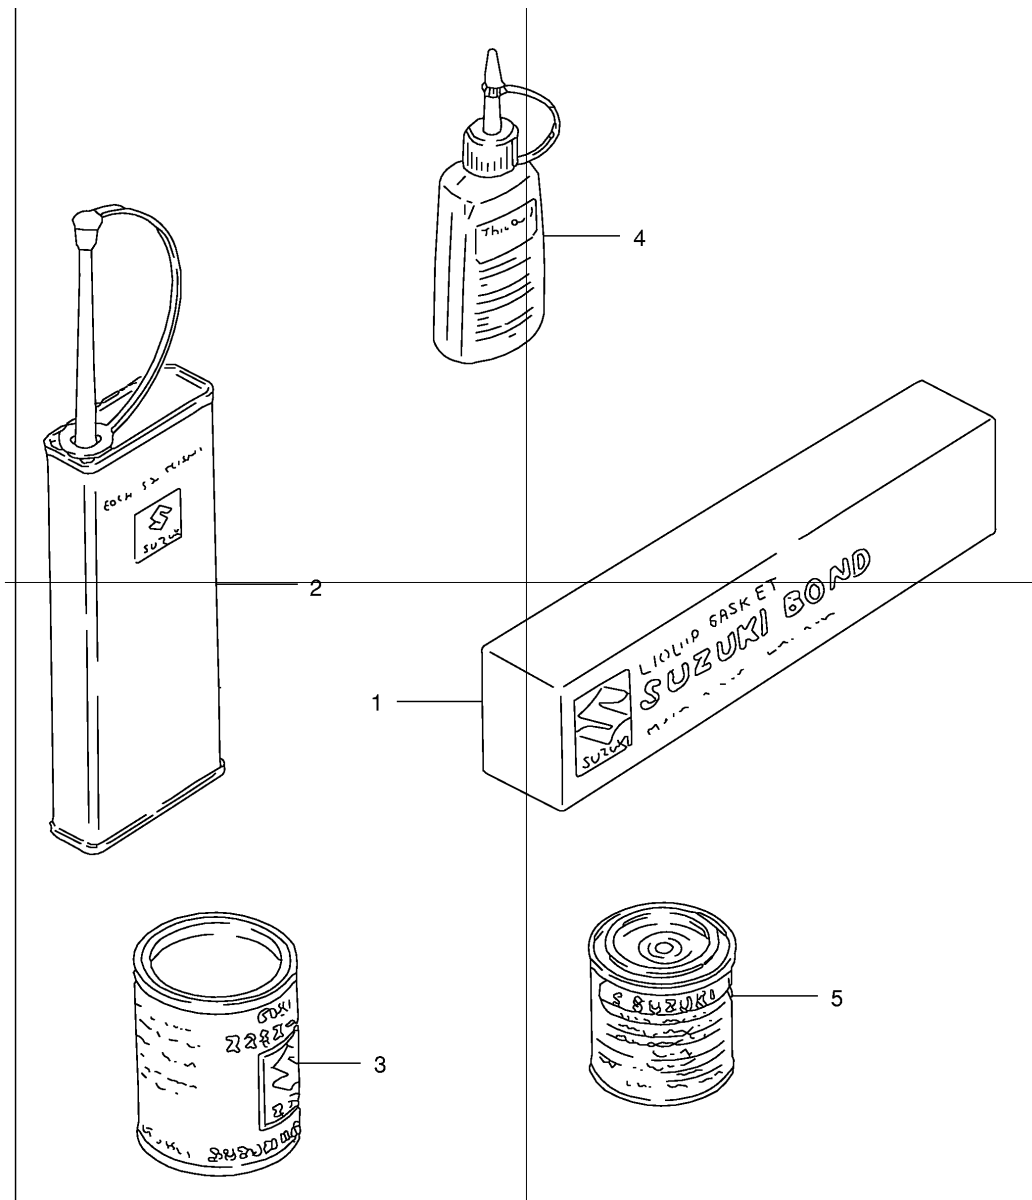

Ref No	Part No	Description
1	99000-31030	Suzuki Bond, No.4
2	99000-32040	Cement, Thread Lock
3	99000-25030	Grease, Super
4	99000-32030	Thread Lock, Super (1303b)
4	99000-32050	Thread Lock, Super (1342)
4	99000-32110	Thread Lock, Super (1322)
4	99000-32120	Thread Lock, Super (1324)
4	99000-32020	Thread Lock, Super (1333b)
5	99000-10109-019	Paint (black)
5	99000-10209-Y7M	Paint (pearl Helios Red)
5	99000-10209-1LE	Paint (paint Medium Blue)